


AMBERGLO

USER MANUAL

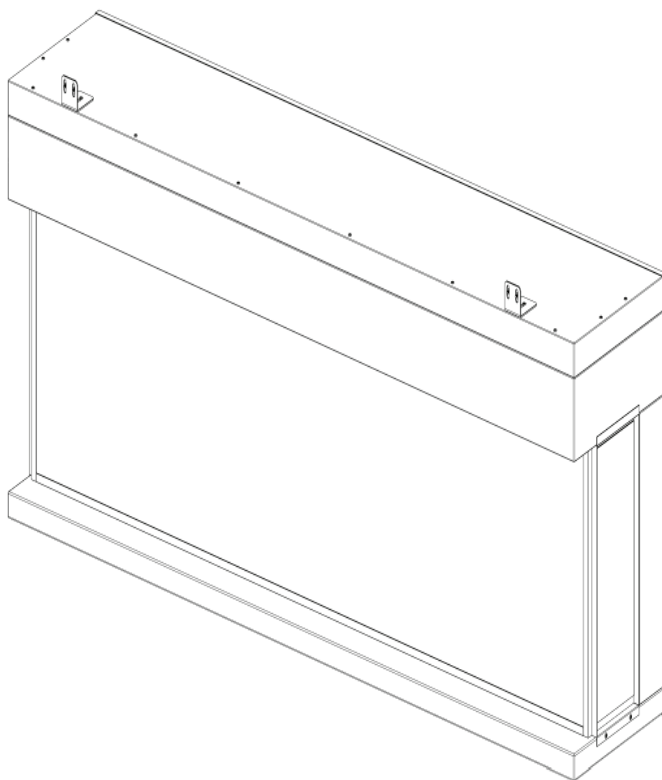

MEDIA WALL ELECTRIC FIREPLACE

AGL080 30 INCH

AGL073 40 INCH

AGL067W 50 INCH

AGL068W 60 INCH

AGL069W 70 INCH

Thank you for choosing this electric fireplace.

Please read this manual before using or installing this electric fire and keep it safe for future reference.

CONTENTS

SAFETY	3
ELECTRICAL SAFETY	5
PARTS SUPPLIED	6
BEFORE INSTALLATION	7
MEDIA WALL REQUIREMENTS	8
PREPARING THE FIRE FOR INSTALLATION	9
INSTALLATION	11
OPERATION	13
SETTING UP THE APP	16
USING THE APP	19
CARE AND MAINTENANCE	25
SUPPORT	27
TECHNICAL SPECIFICATIONS	27
PRODUCT FICHE	28
PSTI AND DECLARATION OF CONFORMITY	29

SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed, including the following:

- **IMPORTANT:** Read all instructions and warnings carefully before starting installation. Failure to follow these instructions may result in a possible electric shock or fire hazard and will void the warranty.
- Before connecting the appliance, be sure that the mains voltage available matches what is specified on the rating label and that the outlet is suitably grounded.
- The appliance must be installed in a place which is in line with national regulations concerning the discharge of air.
- Do not cut, notch or damage any joist, beam or rafter when installing the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Children aged less than 3 years shall be kept away from the appliance unless continuously supervised.
- Children aged 3 to 8 years shall only switch the appliance on or off, provided it has been placed or installed in its intended normal operating position, they have been given supervision or instruction concerning the safe use of the appliance, and they understand the hazards involved.
- Children aged 3 to 8 years shall not plug in, regulate, clean, or perform user maintenance on the appliance.
- **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.
- **WARNING:** In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket outlet.
- **CAUTION:** To avoid a hazard caused by the inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the user or utility.
- Do not attempt to repair, disassemble or modify the appliance. This unit contains no user-serviceable parts.
- Ensure the plug is accessible after installation to disconnect the unit from all power.
- Always unplug or disconnect the appliance from the mains power supply when not in use or when moving or cleaning it. Do not pull the cord to unplug the heater.
- Keep the heater clean. Do not allow any object to enter the ventilation or exhaust openings, as this may cause electric shock, fire, or damage to the heater.
- Do not use the appliance for anything other than its intended use. It is designed for domestic indoor use only.
- There may be a trace of odour during the first few minutes of initial use or after a storage period. This is normal and will quickly disappear.
- If the glass is damaged, do not use the heater in order to avoid a hazard.
- Avoid the use of an extension cord, as the cord may overheat and cause a risk of fire.

- This fireplace is hot when in use. To avoid burns, do not let bare skin touch exposed hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains, at least three feet from the appliance's exposed areas.
- This appliance is designed for indoor use only and is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate this appliance where it may be exposed to water or excessive moisture.
- Do not run the power cable under carpeting, cover it with throw rugs, runners, or similar, and ensure it is kept away from traffic areas and in a position that would not present a trip hazard when positioning it during installation.
- To disconnect this appliance, turn the controls off, then remove the plug from the outlet.
- This appliance has hot, arching, or sparking parts inside. Do not use it in areas where gasoline, paint, or any flammable liquids are used or stored.
- This appliance should not be used to dry clothing, nor should Christmas stockings or decorations be hung on or near it.
- This electric fire is an instant heat source to warm a room and is great for visual room ambience. It doesn't necessarily need to be used as a constant or permanent home heating source.
- If a television or other electrical device is above this fireplace, the installers must ensure that the ambient temperature around the television does not exceed the manufacturer's recommendations.
- Clean the fire regularly to prevent the build-up of hair, dust, or lint from entering the structure and causing a blockage.
- Do not use aerosols or steam cleaners on or around the fire.
- The fire should be tested before installation.
- We always recommend employing an experienced, qualified installer when fitting such products. Each installation will vary, and specialist expertise is often required to conduct the necessary building work. The manufacturer bears no responsibility or liability for any poor workmanship or incorrectly installed fires and/or fireplaces.



THIS SYMBOL MEANS DO NOT COVER IN ORDER TO AVOID OVERHEATING. DO NOT COVER OR OBSTRUCT ANY OF THE HEAT OUTLET GRILLES OR AIR INTAKE OPENINGS OF THE HEATER.

MANUAL HANDLING

- One person should be sufficient to lift the heater. If, for any reason, it is considered too heavy, then obtain assistance.
- When lifting, always keep your back straight. Bend your legs and not your back.
- Avoid twisting at the waist. It is better to reposition your feet.
- Avoid upper-body/top-heavy bending. Always bend from the knees rather than the waist.
- Do not lean forward or sideways while handling the heater.
- Always grip with the palm. Do not use the tips of your fingers for support.
- Always keep the heater as close to the body as possible. This will minimise the cantilever action.
- If required, use gloves to provide additional grip.
- Always use assistance if required.

ELECTRICAL SAFETY

The heater must not be located under an electrical socket; the socket must always be accessible in order to disconnect the heater from the electrical supply for maintenance and cleaning.

- **IMPORTANT:** This heater must be earthed. The mains supply must be safely routed to an electrical socket from the heater.
- If the supply cord is damaged, it must be replaced by the manufacturer, service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is supplied with a BS1363 3-pin plug fitted with a 10-amp fuse. If the fuse requires replacement, it must be replaced with a fuse rated at 10 Amps and approved to BS1362.
- In the event the mains plug has to be removed or replaced for any reason.


NOTE: The wires in the mains lead on this appliance are coloured in accordance with the following code:

- **Green and Yellow** - Earth
- **Blue** - Neutral
- **Brown** - Live

If the wires do not match the colour coding above, please follow the below.


- The green and yellow wire must be connected to the terminal, which is marked with the letter E or with the earth symbol. This colouring will not change.
- The blue wire may be black and must be connected to the terminal marked N.
- The brown wire may be red and must be connected to the terminal marked L.

IMPORTANT: Any cut-off plug should be disposed of safely to prevent a hazard. There is a danger of electric shock if a cut-off plug is inserted into a socket outlet.

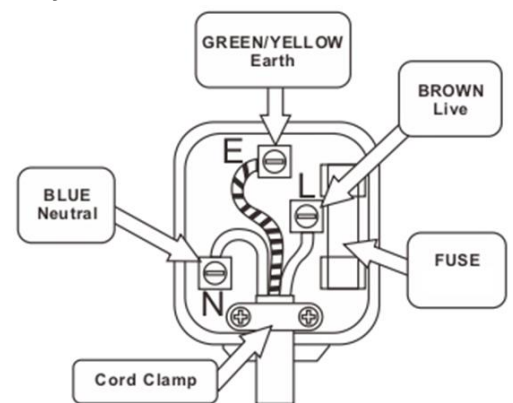

PARTS SUPPLIED

NOTE: Pictures and contents in this manual may differ from the product due to continuous product improvement.

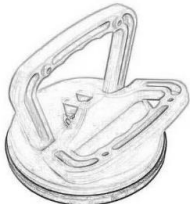PART	DIAGRAM	DESCRIPTION	QTY
A		L-shaped bracket	2 PCS
B		M5x10 screw	2 PCS
C		M4X14 screw	4 PCS
D		Logs	AGL073 - 12 PCS AGL067W - 16PCS AGL068W - 20 PCS AGL069W - 24 PCS AGL080 - 12 PCS
E		Shakeproof washer	2 PCS
-		Remote Control	1
-		Glass Suction Cup	2 PCS

BEFORE INSTALLATION

NOTE: Two people are recommended for installation.


There are multiple ways to personalise the look of your media wall fire, which should be considered before installation.

IMPORTANT: Always measure the fire you have received for the installation dimensions, as these may change due to product development. Please refer to page 11 for installation dimensions.


SIDES:

These fireplaces are provided with side covers, giving you the option of either displaying the sides of the fireplace within your media wall or covering them within it:


One side enclosed
(Either side)

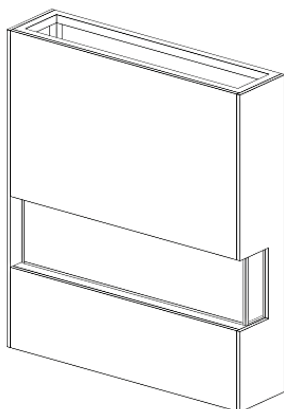

Both sides open

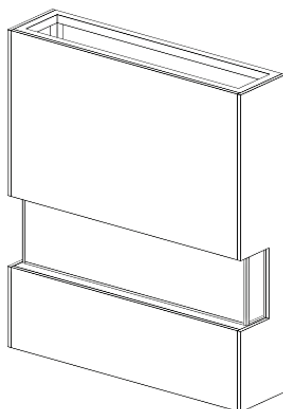


Both sides enclosed

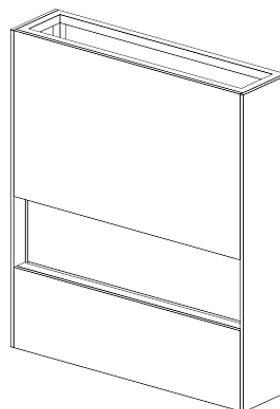


INSTALLATION STYLE

Your fireplace can be installed either flush with the media wall, where the plasterboard meets the edge of the fireplace, or can be recessed so that the media wall covers the body of the fireplace, leaving only the main part of the fire visible.

RECESSED

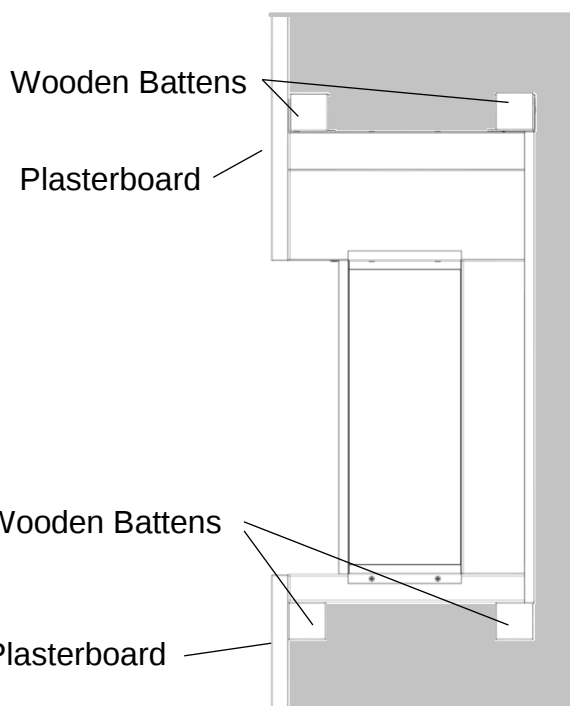

FLUSH

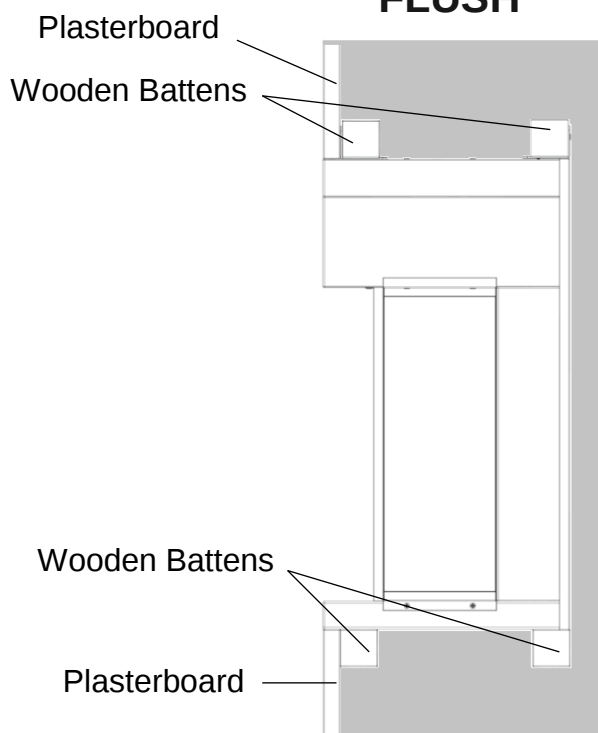

MEDIA WALL REQUIREMENTS

Several factors must be considered when planning the construction of your media wall to ensure its success. We advise you to thoroughly read the installation instructions and understand the process before designing or constructing your media wall.

1) STRENGTH AND STABILITY OF THE STRUCTURE

The structure must be designed to be structurally sound and able to support the weight of the fire and any other items/shelving built into it. Consideration should be given to how the framework is secured to the walls. If you are unsure about the suitability of the planned structure, seek professional advice.

2) WHICH SIDES ARE VISIBLE FOLLOWING INSTALLATION


Your preference regarding the sides may impact the internal structure of the media wall, so this must be decided early in the project.

3) SUPPORT OF THE FIREPLACE

The fireplace requires wooden battens or other support methods to be mounted securely within the media wall.

BASE OF THE FIRE – The fire is designed to stand on a platform, or it can be supported using several wooden battens built into the structure of the media wall.

TOP OF THE FIRE- The fireplace uses two metal brackets, which are secured to the top of the fire through mounting points on the top of the fire. The brackets are designed to fix the fire to wooden battens located above the appliance. The brackets can be mounted at the front or rear of the fire, forward or backward facing, and secured into the batten from the front or behind. Although this offers a lot of flexibility for installation, care must still be taken to ensure that the battens' position aligns with the brackets' location.

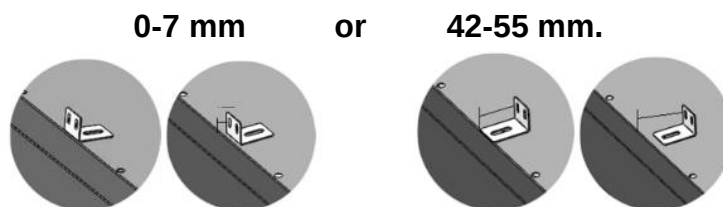

4) INSTALLATION STYLE

The installation style will also affect installation, as this will affect both the suitable position for the battens and the location of battens used for fixing the plasterboard.

5) ROUTE OF THE POWER CABLE


Consideration should be paid to the power cable route from the rear of the fire to the socket. It is strongly advised that the socket or fused spur to which the fireplace is attached is accessible following installation to allow the appliance to be disconnected if necessary.

NOTE: It is advisable to install the fire after the structure of the media wall has been erected but before the plasterboard has been applied, as access is required to secure the fire in place.

PREPARING THE FIRE FOR INSTALLATION


Remove the screws holding the fixing bracket above the front glass panel, then carefully remove the bracket, and keep both the bracket and screws safe for reinstallation.

Step 1

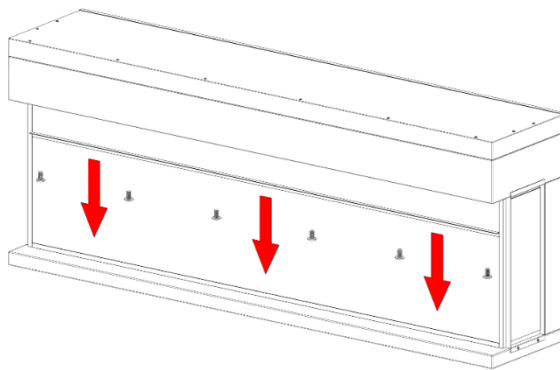


Remove the 8 screws holding the side panels in place and then carefully remove the side panels from each side and keep them safe for reinstallation.

Step 2

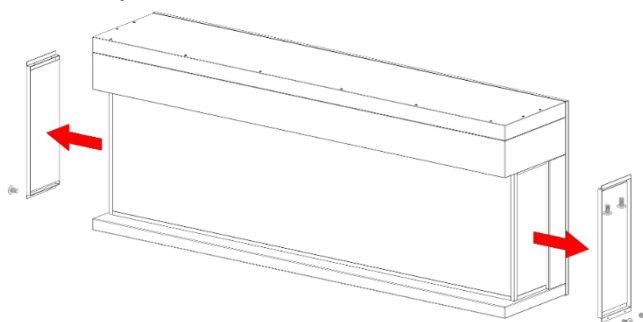

Remove the front glass panel using the glass suction cups. By tilting the glass, the power switch should be in the OFF position to allow the glass to pass before moving to the ON position to enable it to pass entirely. Place the glass on a soft, flat surface, ready for reinstallation.

Step 3

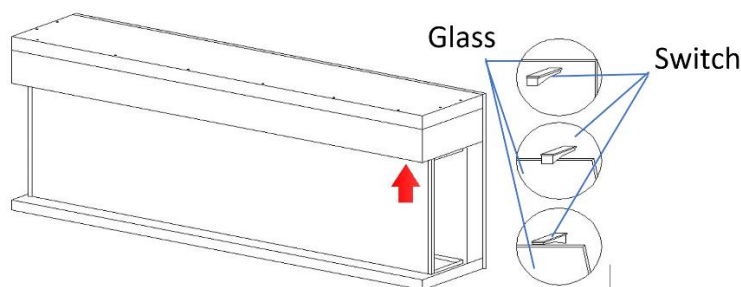


The decorative bed is two-sided, with a glittery and matt side.

Matt: Remove the protective film from the decorative bed.


Glittery: Remove the 3 screws from the decorative bed and flip the bed before re-securing.

Step 4

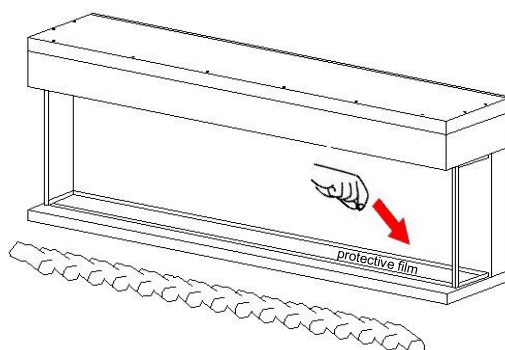


Replace the unit's glass panel, taking great care not to damage the glass. This would follow the same method as removal; when tilting the glass, ensure that the power switch is initially in the ON position to allow the glass to pass. You must remember to switch this back off before continuing.

Step 5

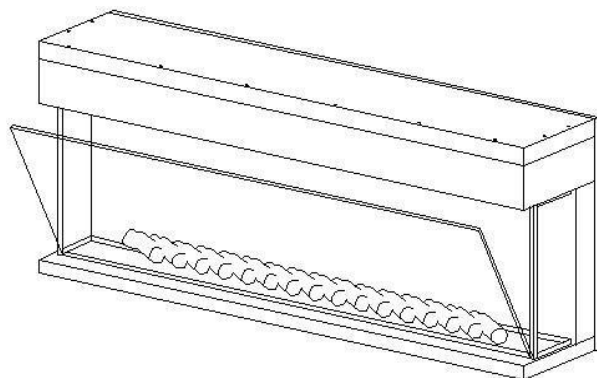


Replace the fixing bracket and secure it with the screws removed in step 1.

Step 6

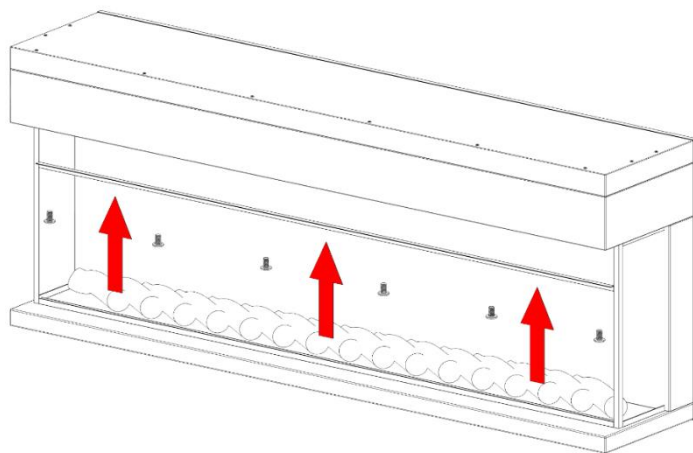

The side panels should then be refitted on either side, and they must be enclosed following installation. If you want the fireplace to be fully open, this step can be ignored.

Step 7

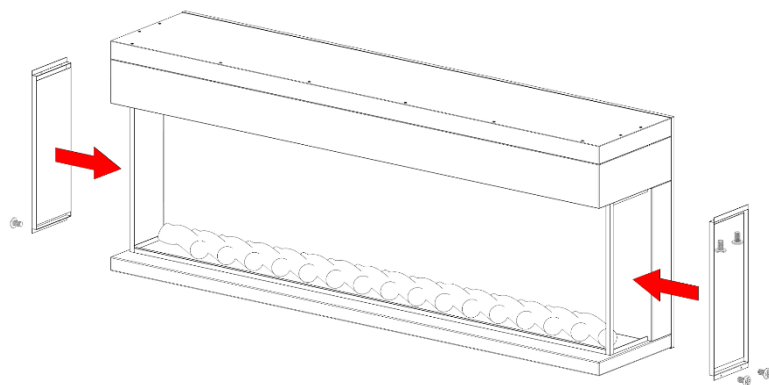


INSTALLMENT DIMENSIONS

Model	UNIT OVERALL DIMENSIONS (W x D x H)	CUTOUT DIMENSIONS (W x D x H)
AGL073	1016 x 262 x 500mm	1031 x 277 x 515mm
AGL067W	1270 x 262 x 500mm	1285 x 277 x 515mm
AGL068W	1524 x 262 x 500mm	1539 x 277 x 515mm
AGL069W	1778 x 262 x 500mm	1793 x 277 x 515mm
AGL080	765 x 262 x 762mm	777 x 277 x 777mm


INSTALLATION

Loosely fix the L-shaped brackets [A] into the chosen mounting points (Front or rear) on the top of the fire using SCREWS (B) and SHAKE PROOF WASHER (E).

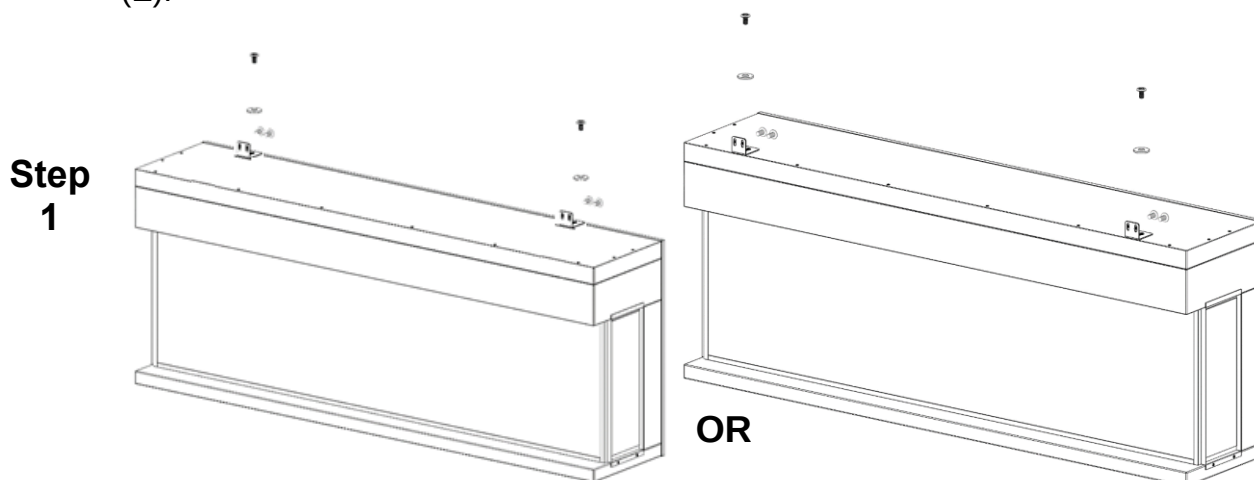


Slide the fire into position within the media wall. Adjust the brackets so that they sit flush with the wooden batten and so that the fire is in its intended position. Mark the bracket's position with a pencil.

NOTE: The brackets can be adjusted back and forth and turned 180° to suit the installation requirements. They can also be secured to the front or rear of the battens.

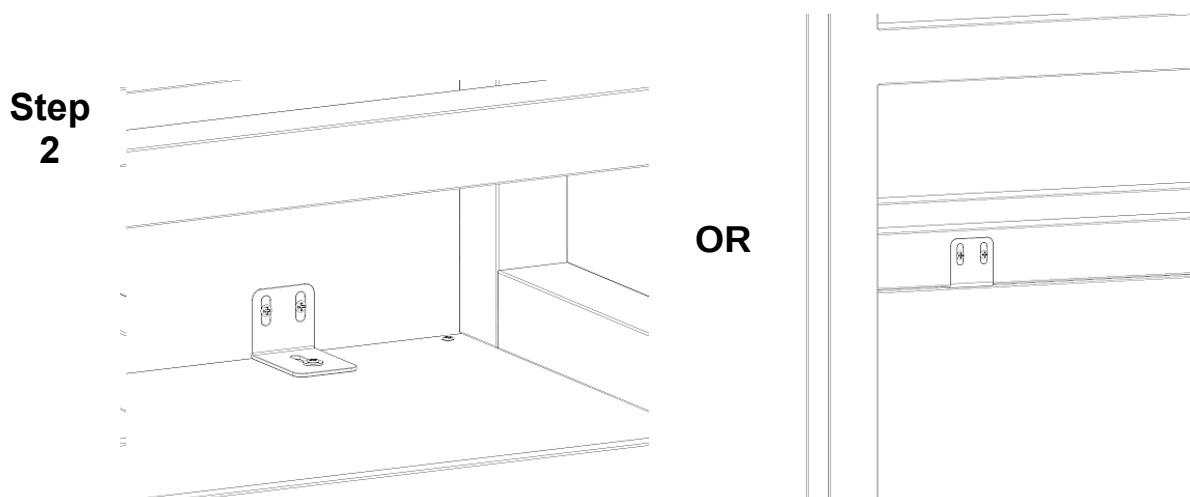


Remove the fire from the media wall and fully tighten the brackets in the marked position on top of the fire before sliding it back into position.

Step 3

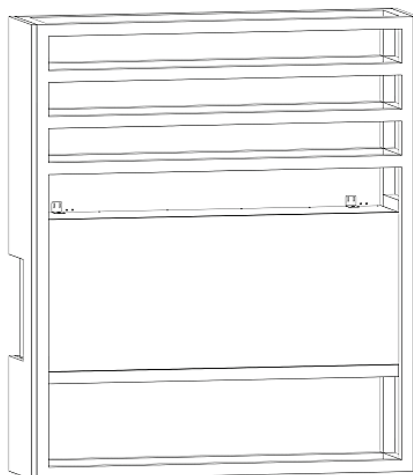

Secure the brackets to the media wall using SCREWS (C)


Step 4

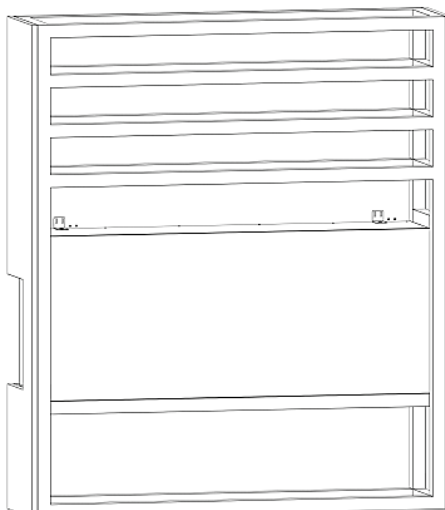

BEFORE USE!

Before using the appliance for the first time, ensure that it has been fully unpacked and that all packaging has been disposed of properly to ensure it does not present a risk to children or animals.

Due to the size and weight of the fire, we advise that 2 people carry out installation to prevent injury or damage.

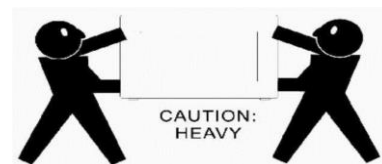

RF EXPOSURE GUIDELINES


IMPORTANT! To meet RF (Radiofrequency) exposure requirements:

1. A minimum separation distance of 20 cm must be maintained between the device and individuals during operation.
2. Operating the device closer than this distance is not recommended.
3. The antenna used for this transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.


OPERATION

The heater control panel is located on the right side of the heater.

O/I: Press the switch into the **I** position to turn the appliance on. Press the switch into the **O** position to turn the appliance off.

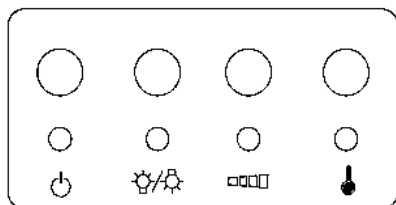

CONTROL PANEL

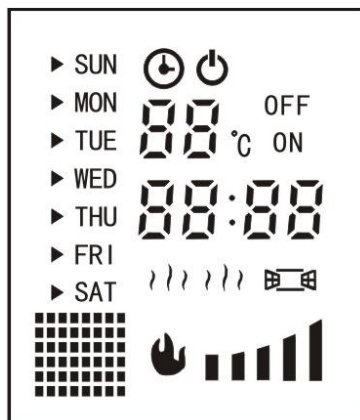

DISPLAY



REMOTE CONTROL

2 AAA batteries required (NOT INCLUDED)

FUNCTIONS

CONTROL PANEL

FUNCTION	IMAGE	DESCRIPTION
POWER		When the unit is turned on using the switch, press the power button to start it. The indicator light will illuminate. You can then select the required function. Press again to turn off the heater and enter standby mode. Press and hold the power button for about 3 seconds to turn on the Wi-Fi function. Press and hold the power button again for about 3 seconds to turn it off.
TEMPERATURE		Repeatedly press to adjust the desired room temperature. Press and hold the temperature button for around 3 seconds to turn on the unit's heat function. Press and hold the temperature button again for approximately 3 seconds to turn the heat function off. The heat function can also be accessed using the remote control.
FLAME EFFECT		Press this button to change the flame effect. Press repeatedly to decrease the flame intensity. There are 5 light intensities, 5 being the brightest and 1 being the lowest. Press and hold this button for about 3 seconds to turn on the intelligent remote-control function. Please ensure that the Wi-Fi function is turned on before activating the function.

COLOUR EFFECT



Press this button to change the flame colour. There are ten types of flame effects.

- C1: yellow
- C2: red
- C3: blue
- C4: green
- C5: red+blue
- C6: red+green
- C7: blue+yellow
- C8: green+yellow
- C9: blue+green
- C10: red+yellow

Hold it for about 3 seconds to change the top light colour. There are seven types of top light effects.

- C1: blue
- C2: green
- C3: red
- C4: green+blue
- C5: red+blue
- C6: red+green
- C7: red+green+blue

REMOTE CONTROL

The remote control works best when used at the same level as the fire.

A slight delay may occur after a function is chosen using the remote. Please allow time before pressing the next button.

POWER		When the unit is turned on using the switch, press the power button to start the unit. Press again to turn off the heater and enter standby mode.
TEMPERATURE	+ AND -	Use to adjust the desired room temperature between 15°C and 40°C.
SETTING THE DAY AND TIME		1) Press, and 'SUN' will flash on the LED screen. 2) Use the up ↑ and down ↓ buttons to select the correct day. 3) Press again to adjust the hour value. 4) Use the + and - buttons to select the correct hour. 5) Press again to adjust the minute value. 6) Use the + and - buttons to confirm the minute value. 7) Press or OK button to complete setting the day and time.

SET TIMER		The timer can be set with up to 10 periods of operation per week: 1) Press  and the time period will flash. 2) Use the + and – buttons to choose the desired time period to adjust (1 to 10). 3) Press  and the day will flash. 4) Use the ↑ and ↓ buttons to choose which days the timer will operate. Use the + to select the flashing day, and – to cancel the flashing day. 5) Press  and the hour will flash and ON will be illuminated. 6) Use the + and – buttons to choose the desired start hour. 7) Press  and the minute value will flash. 8) Use the + and – buttons to choose the desired start minute. 9) Press  and the hour value will flash and OFF will illuminate. 10) Use the + and – buttons to choose the desired finish hour. 11) Press  and the minute value will flash. 12) Use the + and – buttons to choose the desired finish minute. 13) Press  and the temperature will flash. 14) Use the + or – buttons to select the desired temperature. Repeat for each of the 10 time periods you want to set.
OPEN WINDOW DETECTION		Press this button to turn on the open window detection function. When activated, if the room temperature drops rapidly while heating, it will automatically stop heating to save energy. The corresponding icon on the screen will flash. Press the button again to turn off the window detection function.
RESET		Press to clear any timer that has been set.
TIMER		Press to turn the timer on or off. When activated, the timer will follow the settings programmed using the set timer button. The timer indicator will illuminate to show that the timer has been set.
FLAME EFFECT		Press this button to change the flame colour. There are ten types of flame effects: C1: yellow C2: red C3: blue C4: green C5: red+blue C6: red+green C7: blue+yellow C8: green+yellow C9: blue+green C10: red+yellow Hold the button for about 3 seconds to decrease the flame intensity. There are 5 light intensities, with 5 being the brightest intensity and 1 being the lowest intensity.
TOP LIGHT EFFECT		Press this button to change the top light effect. There are seven types of top light effects: Yellow, red, blue and multi-colour. C1: blue C2: green C3: red C4: green+blue C5: red+blue C6: red+green C7: red+green+blue
HEAT FUNCTION		Press this button to turn on the heat function. Press again to turn it off.

DOWNLOADING THE APP

NOTE: The images in this manual are for illustration purposes only. The app is subject to updates, and its interface may change over time.

There are three ways to download the Tuya Smart app:

1. Open your phone browser and go to **smartapp.tuya.com/tuyasmart**. Select your country and press **Download**.
2. Search for **Tuya Smart** in the Apple App Store (iOS) or Google Play Store (Android). Look for the QR icon for reference.
3. Scan the following QR code to be directed to the download page.



REGISTERING ON THE APP

1. Open the app, read the User Agreement & Privacy Policy, and press **Agree**.
2. On the login screen, select **Sign Up**.
3. Select your country and enter your email address.
4. Tick the box to **agree to the terms and conditions**.
5. Press **Get Verification Code**.
6. Check your email inbox and enter the six-digit code in the app.
7. Set a password (6 to 20 characters, including letters and numbers).
8. Select or deselect Service Maintenance & Improvement Activity and Personalised Recommendations based on your preference.
9. Press **Go to App**. You will now be taken to the Tuya Smart home screen.

NOTE: After signing in to the Tuya Smart app for the first time, a pop-up message may appear on the home screen. Follow the on-screen instructions if you wish to enable or access additional features for the home screen.

SETTING UP THE WI-FI (2.4GHZ CONNECTION)

NOTE: If you are unsure about your router settings, contact your **internet provider** for assistance. To connect the unit via Wi-Fi, ensure your router supports **dual-band Wi-Fi** (2.4GHz and 5GHz) and that the 2.4GHz band is available. You can check this in one of the following ways:

1. **If your router already has a 2.4GHz network**, temporarily disable the 5GHz band while setting up the unit. You may re-enable it after setup.
2. **If your router does not have a separate 2.4GHz network**, enable it through your router settings:
 - Open a web browser and enter your router's **IP address** (found on the back of your router).
 - Login to your router settings and look for Wi-Fi or network settings.
 - Follow your provider's instructions to enable 2.4GHz Wi-Fi.
3. **Alternatively, contact your internet provider** to assist with enabling 2.4GHz Wi-Fi.

Once the 2.4GHz network is enabled, connect your phone to it before setting up the unit.


BEFORE YOU START

- Ensure the unit **is within range of the router** during initial setup.
- Ensure the unit remains **within range of the Wi-Fi signal** for normal operation.
- Please note that all app images and diagrams are solely for illustrational purposes, as it is subject to continual improvement and further updates.


SETTING UP YOUR HOME WITHIN THE APP

TUYA is designed to work with many compatible smart devices within your home and multiple devices within different houses. As such, during the setup process, the app requires that different areas be created and named to allow easy management of all your devices. When added, devices are assigned to one of the rooms you created.

TO CREATE A HOME

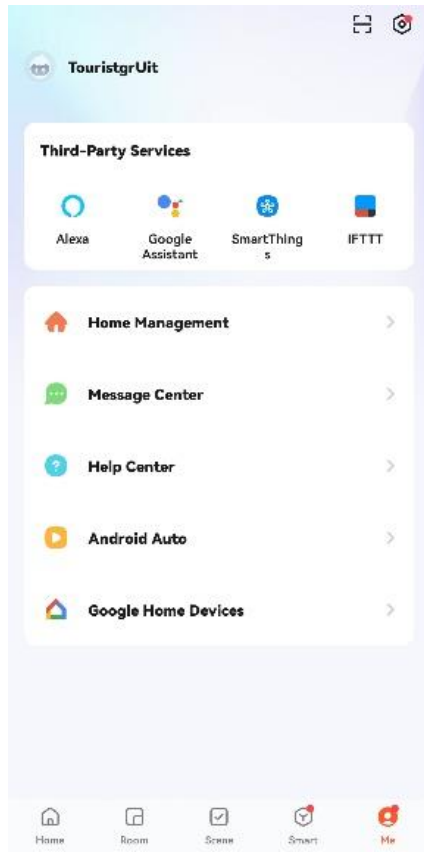


1. Press **Me** on the bottom right of the Home screen.
2. Press **Home Management**, then **Create a Home** button.
3. Type in a name for your home
4. Press the **location** button to select the location of your home. (See **SETTING YOUR LOCATION** below)
5. New rooms can be added by pressing the **Add another room** option at the bottom.
6. Untick any rooms that are not required on the app.
7. Press **Save** in the top right corner.

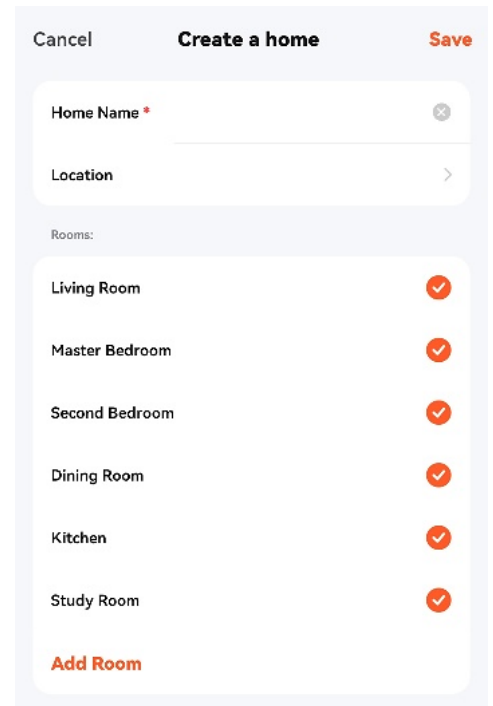


SETTING YOUR LOCATION

Use your finger to move the orange **Home** symbol. When the symbol is in the approximate location of your home, press the **confirm** button in the top right corner.

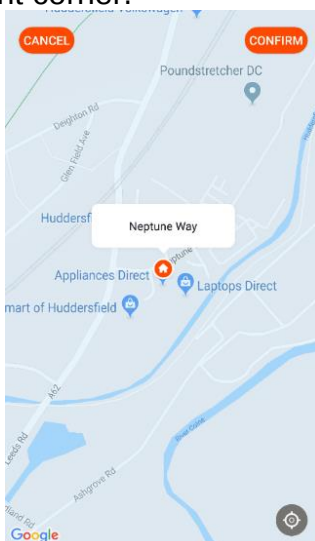

ADD ANOTHER ROOM

Type in the room's name, and press **Done** in the top right corner.

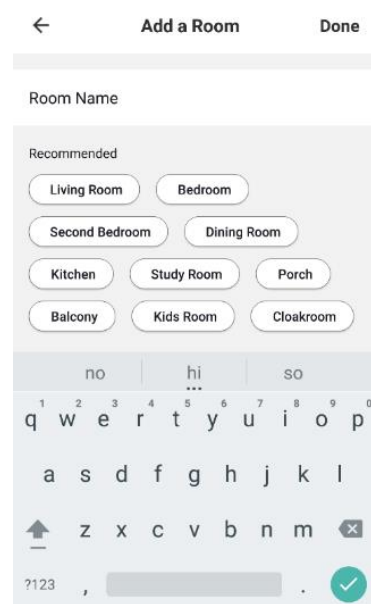

CONNECTING TO THE UNIT


1. Turn the fire on using the power button. Hold down the Power button for 3 seconds to turn the Wi-Fi on.



2. Hold down the flame effect button for 3 seconds to turn the intelligent control on.




3. On the app, now select the 'Add' button in the top corner. Then 'Add Device'.

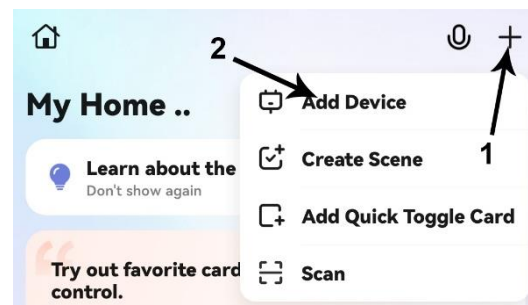

4. Ensure your phone is connected to the same Wi-Fi as the unit. Then select 'Small Home Appliances', then electric fires.

5. Press "Confirm the indicator is blinking on the app" if it is and press next. If the indicator does not blink, return to step 1.


X Wi-Fi Mode

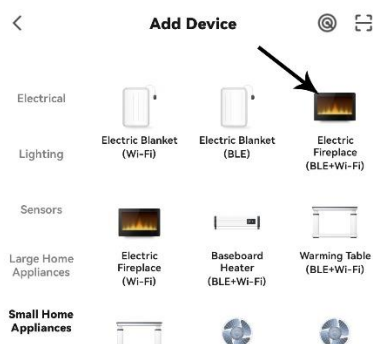

Reset the device



Press and hold the RESET button for 5 seconds until the indicator blinks (subject to the user manual).

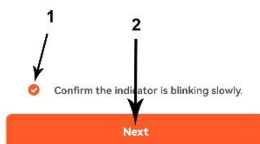


Reset Device Step by Step

6. Enter your Wi-Fi password and then wait for the transfer of the settings to be completed.

Select 2.4 GHz Wi-Fi Network and enter password.

If your Wi-Fi is 5GHz, please set it to be 2.4GHz.
[Common router setting method](#)

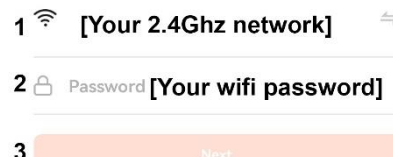

CONTROLLING THE DEVICE VIA THE APP

HOME SCREEN

Voice Control: Press to give verbal instructions for operation.

Add Device: Add a device to the app and go through the setup process.


Name of Heater:
Press to enter the Device Screen

Home: Return to home screen from the Smart Scene and Profile screens


Profile: Provides the option for changing settings.

Scene: Allows you to program intelligent behaviour based on the internal and external environment.

Smart: Shows you smart insights and allows you to set up alerts, cameras and alarms.

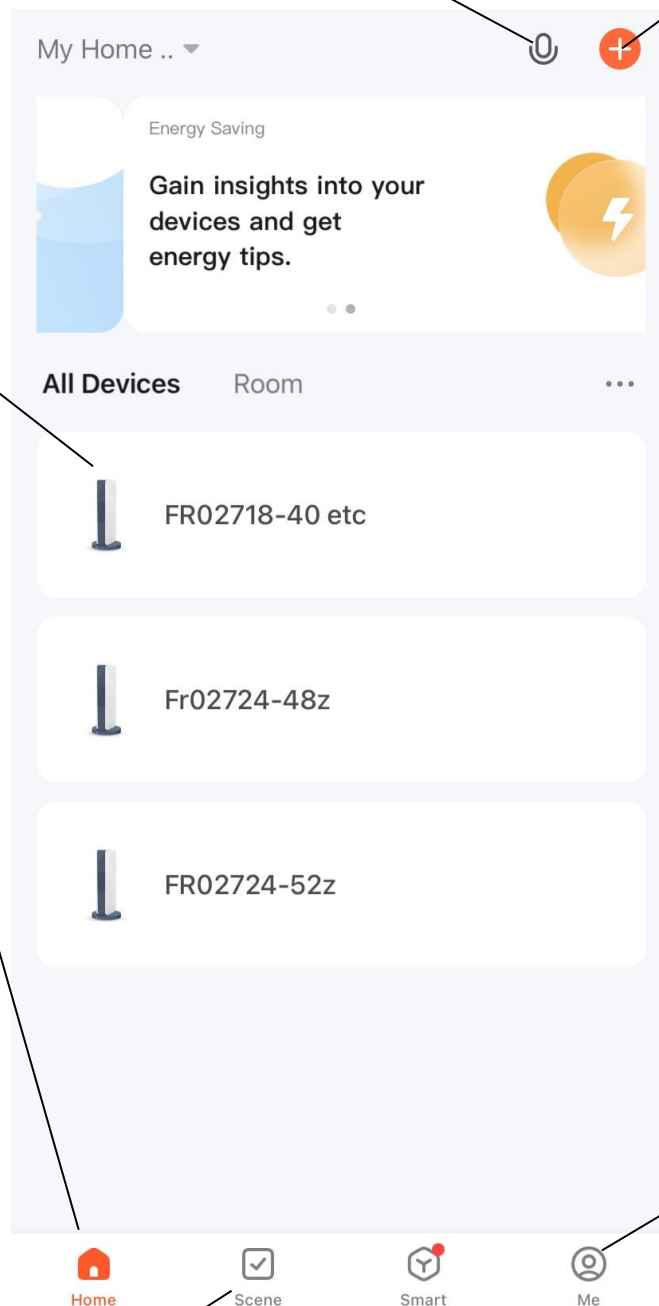

DEVICE SCREEN

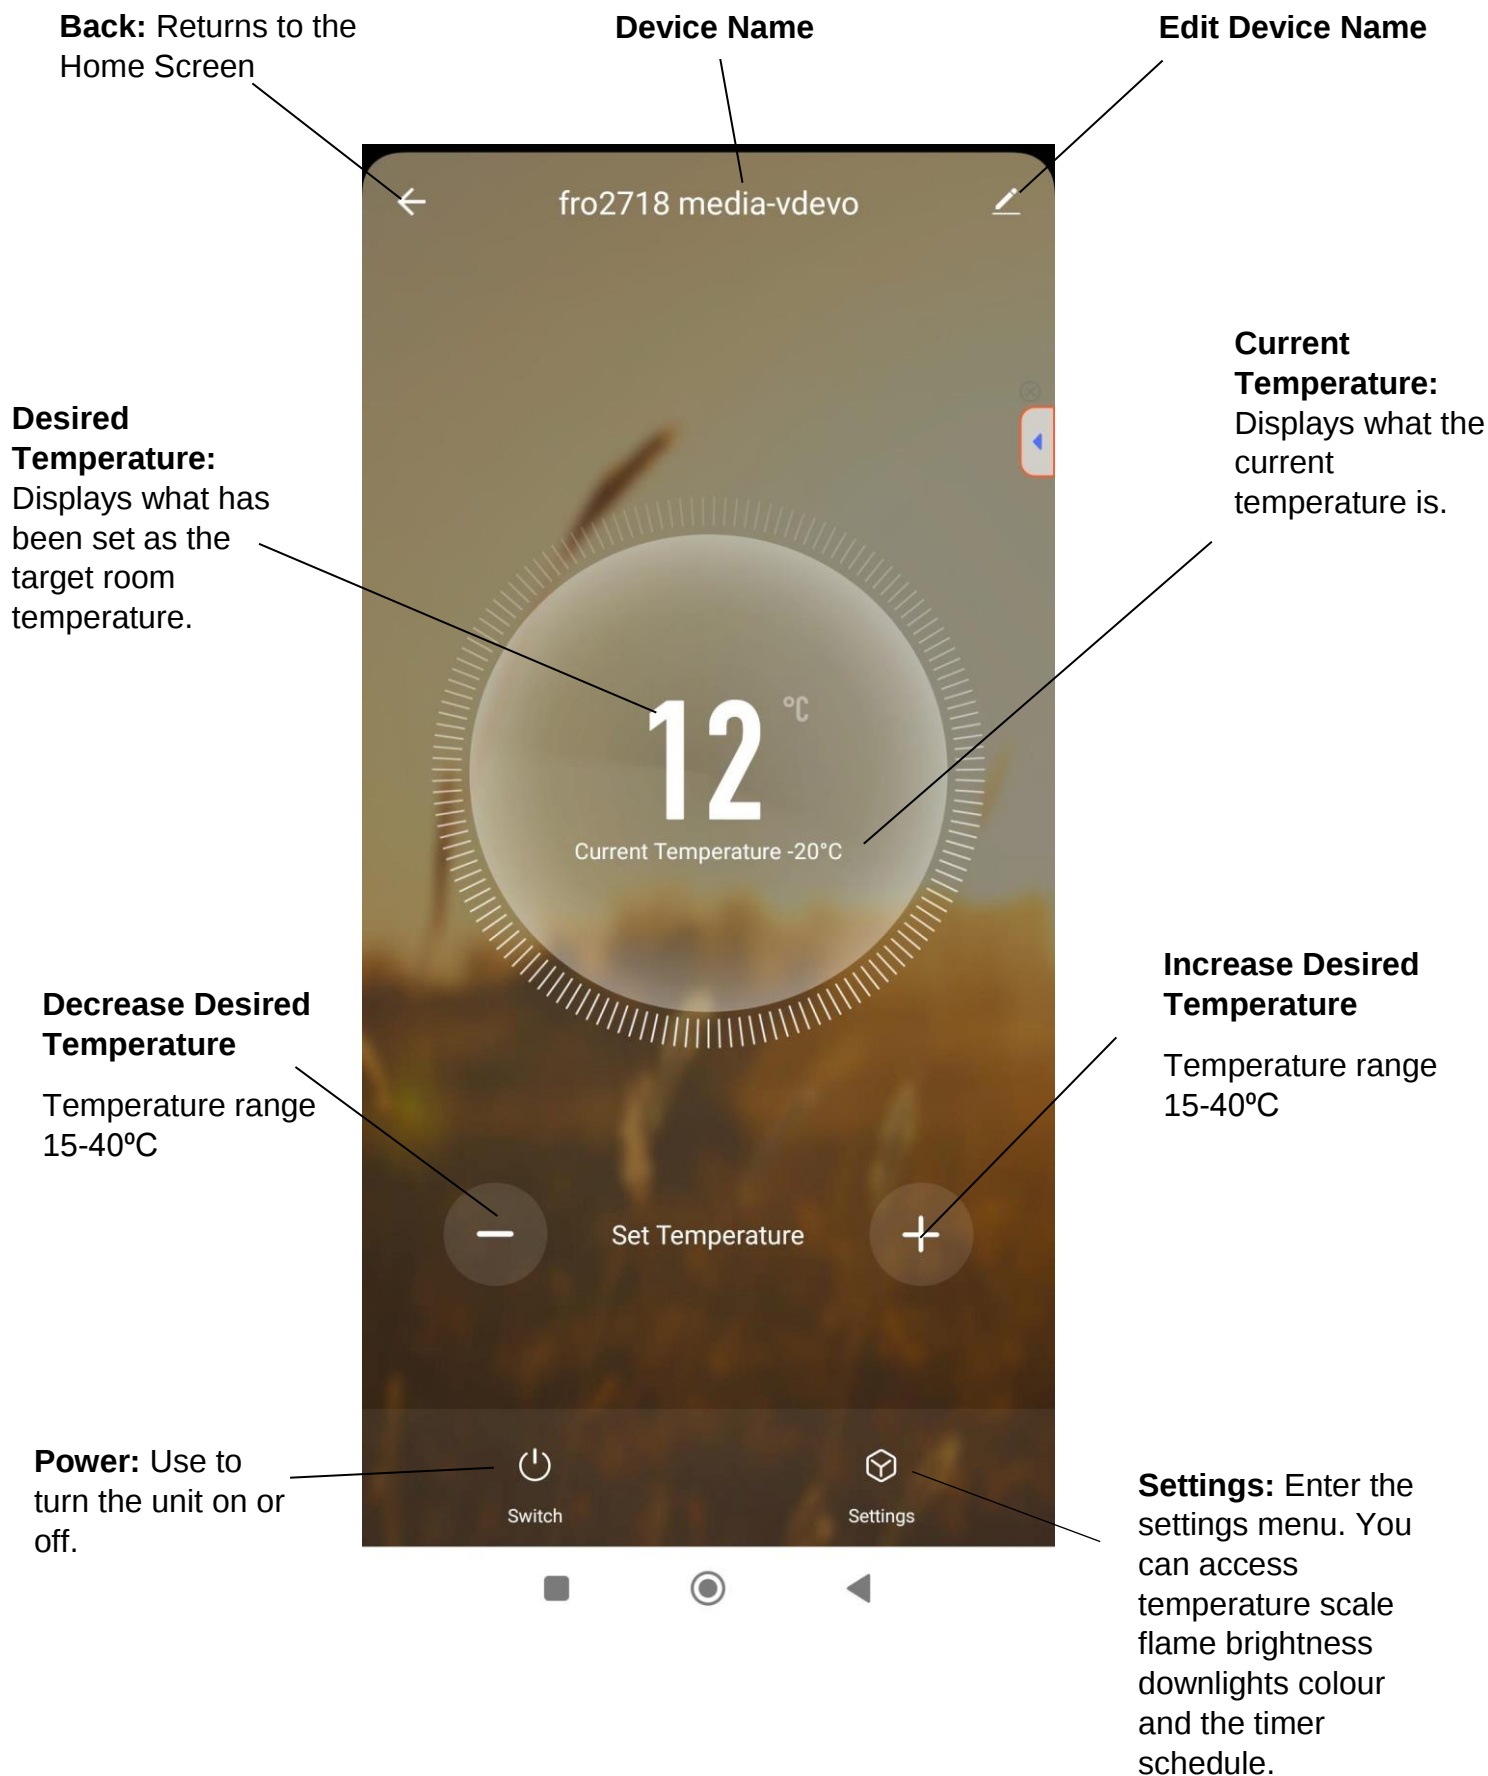

DEVICE SETTINGS

HEAT: To turn the heat on or off.

FLAME COLOUR: Click to change the flame colour.

BACKLIGHT COLOUR: Click to change the backlight colour,

FLAME BRIGHTNESS: Change the flame brightness or turn the flames on or off.

OPEN WINDOWS: Turn on open window detection.

TIMER: Schedule a timer to turn the device on or off.

ADDING A TIMER:

Click add.

Select the time you want the device to turn on or off.

Select 'Repeat' if you would like this to be scheduled for certain days.

You can add a note to name the schedule.

Click 'Switch' to choose if the schedule is to turn on or off the device.

Then click save.

The screenshot shows the 'Settings' app interface. At the top is a brown header with a back arrow and the word 'Settings'. Below this are several settings items, each with a label and a value or toggle switch:

- Heat:** A toggle switch that is currently turned off.
- Flame colour:** The value is 'Yellow' with a right-pointing chevron.
- Backlight colour:** The value is 'Off' with a right-pointing chevron.
- Flame brightness:** The value is 'Off' with a right-pointing chevron.
- Open Windows:** A toggle switch that is currently turned off.

Below these settings is a section for the 'Timer', indicated by a right-pointing chevron. The timer screen itself has a light blue background and features a clock icon with the text 'No timer data' below it. At the bottom of this screen is an orange 'Add' button. Below the 'Add' button is a section titled 'Add Schedule' with a back arrow on the left and a 'Save' button on the right. This section contains a time picker with two columns of numbers (05 to 11 and 57 to 03). The time '08:00' is selected. Below the time picker are three rows of options:

- Repeat:** A dropdown menu currently showing 'Weekday' with a right-pointing chevron.
- Note:** A text input field with a right-pointing chevron.
- Switch:** A dropdown menu currently showing 'ON' with a right-pointing chevron.

SMART SCENES


Smart Scenes is a powerful tool that allows the user to customise the operation of the air heater based on conditions within the room and outside influences. This gives the user the option of specifying much more intelligent actions. These are split into two categories: Scene and Automation.

SCENE

The scene allows for adding a one-touch button to the Home Screen. The button can be used to change several settings in one go and all the unit settings. Several scenes can easily be set up, allowing the user to easily change between several pre-set configurations.

AUTOMATION

Automation allows an automatic action to be set up for the device. This can be triggered by the Time and various other influences, depending on what other TUYA-enabled devices you have on the network.

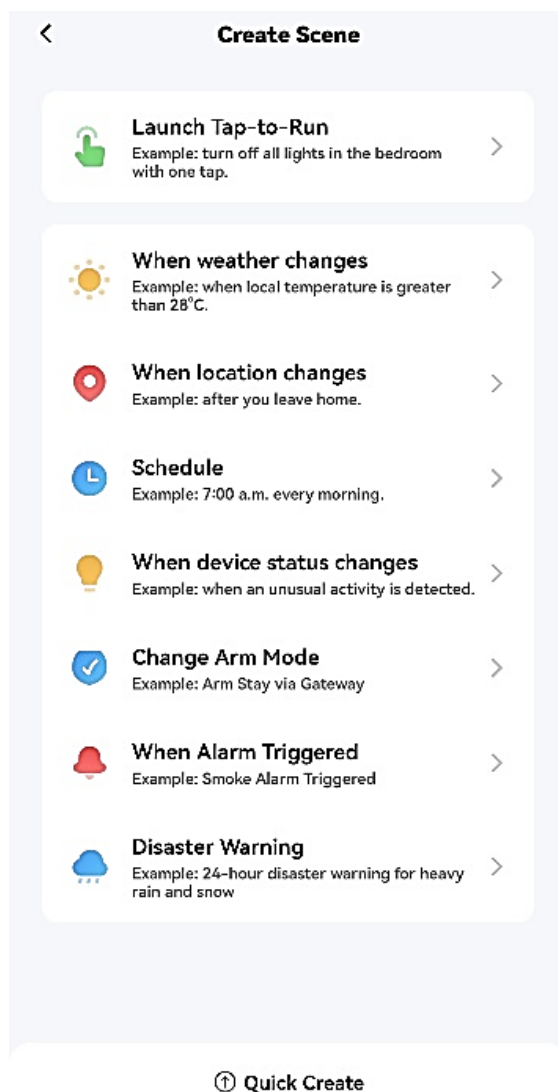

SETTING UP A SCENE / AUTOMATION

1. Press the **Scene** button at the bottom of the home screen.
2. Press the **Create Scene** button or the **+** icon at the top right corner.
3. Select a scene or automation based on the several options available: [S=Scene, A=Automation]

S	Launch Tap-to-Run	Manually activate a scene with one tap.
A	When Weather Changes	Trigger actions based on temperature, humidity, or weather (e.g. rain, snow).
A	When Location Changes	Automate devices when arriving at or leaving a location.
A	Schedule	Run actions at specific times or days (e.g. 7:00 AM daily).
A	When the Device Status Changes	Trigger actions when another device changes state (e.g., the heater turns on when the door opens).
A	Change Arm Mode	Automatically change security system mode (Arm, Disarm, Stay).
A	When Alarm Triggered	Activate actions when a device alarm goes off (e.g. smoke alarm).
A	Disaster Warning	Trigger scenes in response to government-issued weather alerts.

4. When creating a scene or automation (except for "Launch Tap-to-Run"), you'll need to set a precondition and define the action to be performed when that condition is met. Actions can include changing the arm mode, switching the appliance on or off, adjusting the temperature, changing the operating mode, enabling or disabling the child lock (if available), activating another scene, sending a notification, or adding a delayed action. You will also need to select the specific appliance the scene will control.

NOTE: The "more settings" button allows you to customise the icon for the scene or automation and the room to which you would like this to apply.

5. Once you have the precondition (If), the function to perform for the selected appliance (Then), and your preferential settings, press the save button, name your Scene or Automation, and confirm.

NOTE: Some functions and features under Smart Scenes and Automation may not be available. The application is subject to continual improvement and development.

PROFILE TAB

THIRD-PARTY SERVICES

Integrate your devices with voice assistants and automation services for hands-free control and smart scheduling.

Alexa / Google Assistant / SmartThings / IFTTT

- These options let you link your Tuya-compatible devices to third-party platforms for voice commands, routines, or advanced automation workflows.

HOME MANAGEMENT

Allows you to manage your Tuya smart home environment.

- Create and customize homes
- Add or remove rooms
- Share control of devices with family members or housemates

MESSAGE CENTER


Shows system and device notifications.

- View alerts from smart devices (e.g., if an alarm is triggered)
- See activity logs or system messages related to your setup

HELP CENTER

Offers FAQs and basic troubleshooting support.

- Browse frequently asked questions
- Learn how to use features or solve common problems
- Find contact options for support (depending on region)

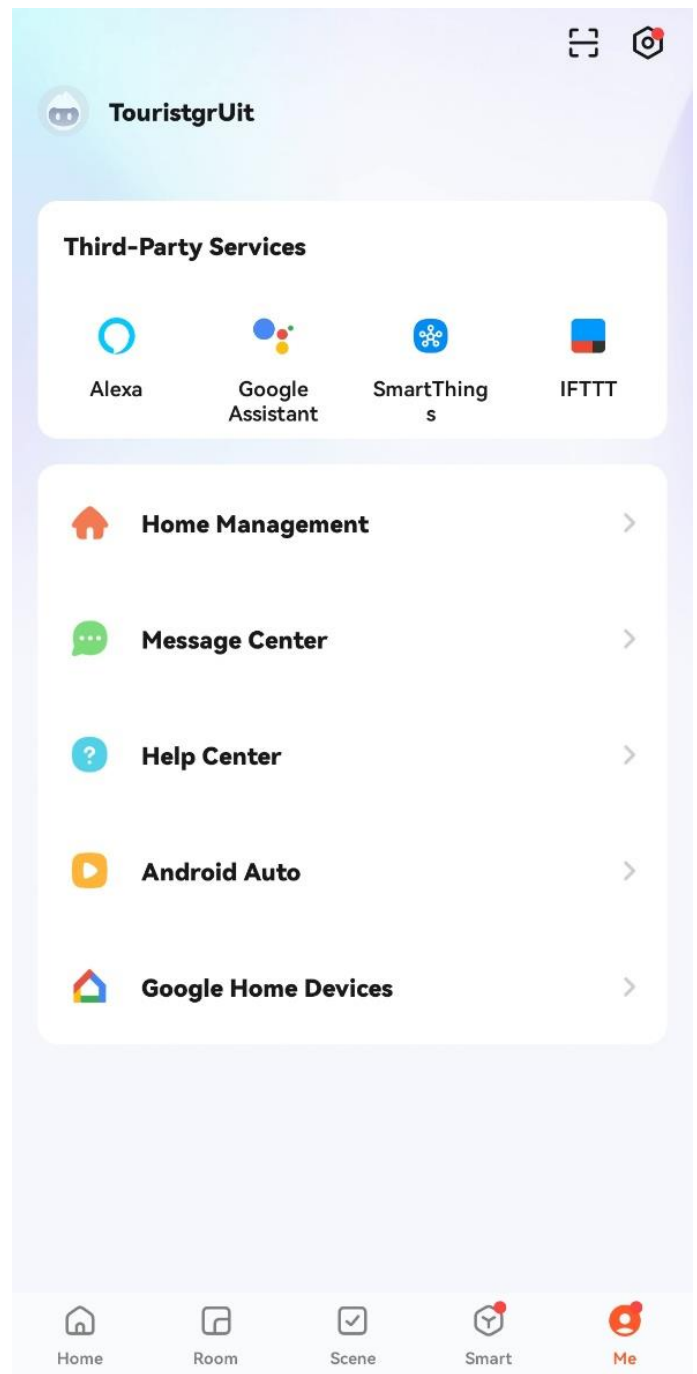

CARE AND MAINTENANCE

When cleaning the appliance, the power should be disconnected, and the unit should be cool.

Dust can be removed by lightly wiping the glass surface with a clean, lint-free cloth or paper towel. Fingerprints or other marks can be removed using a damp cloth and a good-quality household glass cleaner. The front glass panel should be thoroughly dried before reusing the heater.



CAUTION:

- Do not use an abrasive cleaner on the glass panels.
- Do not spray liquids directly onto any surface of the unit.
- Do not clean the glass on the inside of the unit, as this may cause damage to the surface.
- The decorative logs may leave a residue on the fuel bed; this is normal and can be cleaned with a soft, damp cloth. Ensure the fire is cool and turned off before cleaning the fuel bed. Ensure any water residue from cleaning has been dried before using the fire.

TROUBLESHOOTING

Most problems are simple to resolve - please refer to the following table before calling a service engineer:

Problem	Possible Cause	Check
The fire has stopped working.	The fire has overheated, the thermal safety device has been activated, or a circuit breaker has tripped.	• Check there is power to the socket where the fire is connected. • Check the fuse in the plug, • Leave for 10 minutes in case of thermal cut-out.
The flame is not moving.	Flame motor defective	Contact the retailer or manufacturer.

SERVICING

A competent person must conduct any servicing or repairs after reading the service manual. Customer service can provide the service manual by emailing Support@furniture123.co.uk.

WI-FI CONNECTION TROUBLESHOOTING (TUYA SMART APP)

If you experience difficulties connecting your device to the Tuya Smart app, refer to the table below for common issues and solutions.

ISSUE	POSSIBLE CAUSE	POSSIBLE SOLUTION
Device not found during setup	• Appliance is too far from the router. • Mobile phone is connected to a 5GHz network. • Wi-Fi interference or weak signal.	• Ensure your phone is connected to a 2.4GHz Wi-Fi network. • Place the appliance closer to the router during setup. • Restart your router and phone before retrying.
Wi-Fi indicator not blinking	• Device is not in pairing mode. • Incorrect pairing mode selected.	• Hold down the Power button for 3 seconds to turn the Wi-Fi on. Hold down the flame effect button for 3 seconds to turn the intelligent control on and reattempt to pair with the steps on page 17.
Unable to connect to Wi-Fi	• Incorrect Wi-Fi password. • Router limitations or signal issues. • Check router settings	• Verify the Wi-Fi password is correct. • Avoid Wi-Fi names (SSID) with special characters. • Ensure your router is not using MAC filtering or firewall blocks. • Place the device closer to the router during setup. • Encryption should be WPA2-PSK, and the authorization type should be set to AES.
The device was added but did not respond in the app	• Connection was incomplete. • App lacks required permissions.	• Restart the Tuya Smart app and check if the device responds. • Ensure the app has access to Bluetooth, Location, and Nearby Devices in your phone's settings. • Remove and re-add the appliance if needed
Stuck during pairing	• Too many connection attempts in a short time. • Wi-Fi signal interruption.	• Wait at least 10 seconds before restarting the pairing process. • Power cycle the device before retrying.
Frequent disconnections	• Weak Wi-Fi signal. • Network instability.	• Move the router closer or use a Wi-Fi extender. • Keep the device away from thick walls or electronic interference (e.g., microwave ovens). • Ensure the router firmware is up to date.

WARNING: Do not attempt to open, disassemble, or modify the unit. Doing so may result in electric shock, damage to the appliance and voiding of the warranty.

If the above troubleshooting is unable to fix the issue, you may refer to your internet provider for issues concerning network connections and may find suitable fixes for Tuya-related issues or queries on the link: <https://support.tuya.com/en/help>

If issues persist, please do not hesitate to contact customer service.

WASTE ELECTRICAL RECYCLING

This symbol indicates that this product is classified as electrical or electronic equipment and should not be disposed of with other household waste.

The Waste Electrical and Electrical Equipment (WEEE) Directive has been introduced across the European Union:

- To recycle waste electrical products using the best available recovery and recycling techniques in order to minimise the impact on the environment.
- To treat any hazardous substances.
- To avoid increasing landfills.



WEEE product should be disposed of by handing it over at a designated collection point. Please contact your local authority for more information about where you can drop off your waste product for recycling.

SUPPORT

Please, for your own convenience, make these simple checks before calling the service line.

1. Is the unit plugged into the mains?
2. Is the fuse OK?
3. Switch the unit off and wait ten minutes to see if the issue is resolved. Restart the unit.

If the unit still fails to operate, call 0330 390 3062 or log in to your online account to complete an online return.

www.furniture123.co.uk/content/customer-services

Office hours: 9 AM - 5 PM, Monday to Friday

Buy It Direct
Unit 2A, Trident Business Park,
Neptune Way, Leeds Road,
Huddersfield, HD2 1UA.



TECHNICAL SPECIFICATION

	Fully inset media wall fire.				
Model	AGL073	AGL067W	AGL068W	AGL069W	AGL080
Rated Voltage	220-240V~				
Rated Frequency	50-60Hz				
Rated Power	1800W				
Dimensions H x W x D	500x1016x262mm	500x1270x262mm	500x1524x262mm	500x1778x262mm	765x762x262mm
Weight	28.7kg	35.87kg	42.73kg	50.08kg	31.3kg

PRODUCT FICHE

Model Identifier: AGL073, AGL067W, AGL068W, AGL069W, AGL080							
Item		Symbol	Value	Unit	Item		Unit
Heat Output					Type of heat output/room temperature control (select one)		
Nominal heat output		P _{nom}	1.8	kW	single stage heat output and no room temperature control		No
Minimal heat output		P _{min}	N/A	kW	two or more manual stages, no room temperature control		No
Maximum continuous heat output		P _{max}	1.8	kW	with mechanical thermostat room temperature control		No
Power Consumption					with electronic room temperature control		No
In off mode		e _{lmax}	N/A	W	with electronic room temperature control plus day timer		No
In standby mode		e _{lmin}	0.50	W	with electronic room temperature control plus week timer		Yes
In idle mode		e _{lsb}	0.30	W	Other control options (multiple selections possible)		
In network standby		P _{nsm}	0.95	W	room temperature control with presence detection		No
Seasonal efficiency			94	%	room temperature control, with open window detection		Yes
Standby mode with display:				Y	with distance control option		Yes
					with adaptive start control		No
					with working time limitation		Yes
					with black bulb sensor		No
					Self learning function		No
					Control Accuracy		No
Contact Details		Buy It Direct, Unit 2A, Trident Business Park, Neptune Way, Leeds Road, Huddersfield, HD2 1UA. Buy It Direct. The Black Church. St Mary's Place. Dublin 7.					

PSTI STATEMENT OF COMPLIANCE

Description: **MEDIA WALL ELECTRIC FIREPLACE**

Model Number: **AGL073, AGL067W, AGL068W, AGL069W, AGL080**

Manufacturer: Buy It Direct, 2A Trident Business Park, Leeds Road, Huddersfield, HD2 1UA

PSTI Contact: TiSecurity@buyitdirect.co.uk

We have prepared this statement of compliance and can confirm that this product is compliant with the deemed compliance conditions in Schedule 2 of The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023.

Duration of security updates: 30/12/2030. This date is correct at the time of printing, but we may be extended. Please visit www.furniture123.co.uk for the latest information and details of our PSTI compliance.



Richard Leach

Compliance and Quality Manager, Buy It Direct, Huddersfield

24th July 2025

EU DECLARATION OF CONFORMITY

Hereby, Furniture123 declares that these electric fires are in compliance with Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following internet addresses:

<https://furniture123.co.uk/files/DOC/EU/AGL073.pdf>

<https://furniture123.co.uk/files/DOC/EU/AGL067W.pdf>

<https://furniture123.co.uk/files/DOC/EU/AGL068W.pdf>

<https://furniture123.co.uk/files/DOC/EU/AGL069W.pdf>

<https://furniture123.co.uk/files/DOC/EU/AGL080.pdf>

UK DECLARATION OF CONFORMITY

Hereby, Furniture123 declares that these electric fires are in compliance with the Radio Equipment Regulations 2017.

The full text of the UK Declaration of Conformity is available at the following internet addresses:

<https://furniture123.co.uk/files/DOC/UK/AGL073.pdf>

<https://furniture123.co.uk/files/DOC/UK/AGL067W.pdf>

<https://furniture123.co.uk/files/DOC/UK/AGL068W.pdf>

<https://furniture123.co.uk/files/DOC/UK/AGL069W.pdf>

<https://furniture123.co.uk/files/DOC/UK/AGL080.pdf>