


AMBERGLO

USER MANUAL

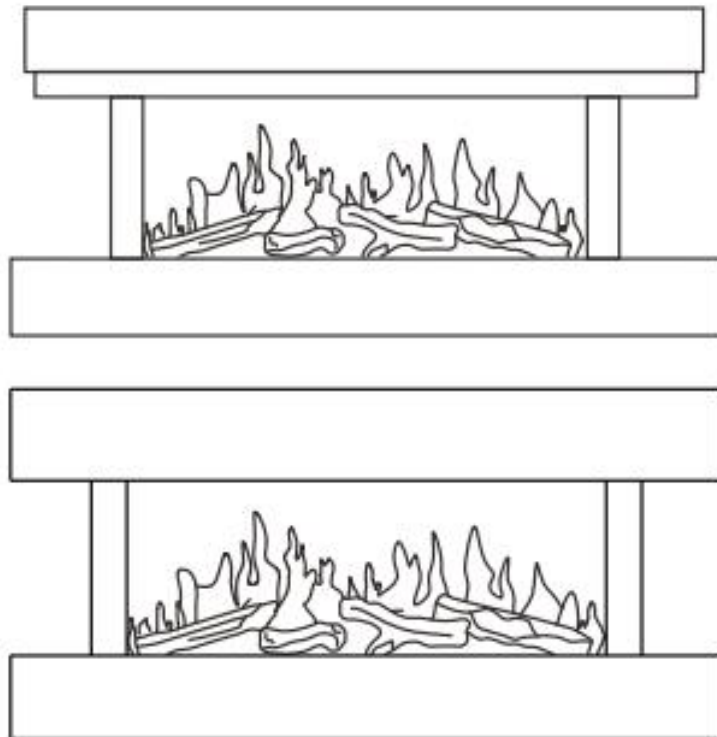

AmberGlo Electric Fire with LED Effect Lights

AGL037 / AGL053 / AGL054 / AGL055 / AGL089

Thank you for choosing this AmberGlo electric flame effect heater.

Please read this guide, which aims to improve your understanding and appreciation of your new heater, and please retain it for future reference.

CONTENTS

SAFETY	3
MANUAL HANDLING	4
ELECTRICAL SAFETY	5
PARTS SUPPLIED	6
PRODUCT DIAGRAM	7
INSTALLATION	8
OPERATION	10
APP CONNECTION	12
USING THE APPLICATION	16
CARE AND MAINTENANCE	22
BATTERY INFORMATION	22
TECHNICAL SPECIFICATION	22
WI-FI CONNECTION TROUBLESHOOTING	23
TROUBLESHOOTING	24
SUPPORT	25
PRODUCT FICHE	26

SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed, including the following:

- **IMPORTANT:** Read all instructions and warnings carefully before starting installation. Failure to follow these instructions may result in a possible electric shock or fire hazard and will void the warranty.
- Before connecting the appliance, be sure that the mains voltage available matches that specified on the rating plate, and that the outlet is suitably grounded.
- The appliance must be installed in a place which is in line with national regulations concerning the discharge of air.
- Do not cut, notch or damage any joist, beam or rafter when installing the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children aged 3 and under shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position, they have been given supervision or instruction concerning the safe use of the appliance, and they understand the hazards involved. Children aged 3 and under shall not plug in, regulate, clean, or perform user maintenance on the appliance
- Children under 3 years should be kept away unless continuously supervised.
- **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.
- **WARNING:** In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket outlet.
- **CAUTION:** In order to avoid a hazard due to the inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Do not attempt to repair, disassemble, or modify the appliance. This unit contains no user-serviceable parts.
- Ensure the plug is accessible after installation to disconnect the unit from all power.
- Always unplug or disconnect the appliance from the mains power supply when not in use or when moving or cleaning it. Do not pull the cord to unplug the heater.
- Keep the heater clean. Do not allow any object to enter the ventilation or exhaust opening, as this may cause electric shock, fire, or damage to the heater.
- Do not use the appliance for other than its intended use. It is designed for domestic indoor use only.
- There may be a trace of odour during the first few minutes of initial use or after a storage period. This is normal and will quickly disappear.
- **WARNING:** If the glass is damaged, do not use the heater in order to avoid a hazard.
- Avoid the use of an extension cord, as the cord may overheat and cause a risk of fire.
- This fireplace is hot when in use. To avoid burns, do not let bare skin touch exposed hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains, at least 1 metre from the front and sides of this appliance.

- This appliance is designed for indoor use only and is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate this appliance where it may become exposed to water.
- Do not place this fire directly onto a carpeted surface to avoid discolouration due to the heat.
- Do not run the power cable under carpeting. Do not cover the cord with throw rugs, runners, or the like. Ensure the cord is kept away from traffic areas and kept in a position which would not present a trip hazard when positioning it during installation.
- To disconnect this appliance, press the On/Off button to turn it off, then remove the plug from the outlet.
- This appliance has hot and arching or sparking parts inside. Do not use it in areas where gasoline, paint, or any flammable liquids are used or stored.
- This appliance should not be used as a drying rack for clothing, nor should Christmas stockings or decorations be hung on or near it.
- This electric fire is an instant heat source to warm up a room and is great for visual room ambience; it doesn't necessarily need to be used as a constant or permanent source of heating for the home.
- If a television or other electrical device is above this fireplace, the installers must ensure that the ambient temperature around the television does not exceed manufacturers' recommendations.
- Clean the fire regularly to prevent the build-up of hairs, dust, or lint around the fire, as this may cause the outlet to become blocked.
- Do not use aerosols or steam cleaners on or around the fire.
- The fire should be tested before installation.
- We always recommend employing an experienced, qualified installer when fitting such products. Each installation will vary, and specialist expertise is often required to conduct the necessary building work. The manufacturer bears no responsibility or liability for any poor workmanship or incorrectly installed fires and/or fireplaces.

Manual Handling

- The heater must not be moved while in use. Please allow a suitable amount of time for the unit to cool before attempting to move it.
- One person should be sufficient to lift the heater. If, for any reason, it is considered too heavy, then obtain assistance.
- When lifting, always keep your back straight. Bend your legs and not your back.
- Avoid twisting at the waist. It is better to reposition your feet.
- Avoid upper body / top heavy bending. Always bend from the knees rather than the waist. Do not lean forward or sideways whilst handling the heater.
- Always grip with the palm of the hand. Do not use the tips of your fingers for support.
- Always keep the heater as close to the body as possible. This will minimise the cantilever action.
- If required, use gloves to provide additional grip.
- Always use assistance if required.

ELECTRICAL SAFETY

The heater must not be located under an electrical socket; the socket must always be accessible in order to disconnect the heater from the electrical supply for maintenance and cleaning.

IMPORTANT: This heater must be earthed. The mains supply must be safely routed from the heater to an electrical socket.

If the supply cord is damaged, it must be replaced by the manufacturer, service agent or a similarly qualified person in order to avoid a hazard.

This appliance is supplied with a BS1363 3-pin plug fitted with a 13-amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at **13 Amp** and approved to BS1362.


In the event the mains plug has to be removed or replaced for any reason, please note:

NOTE: The wires in the mains lead on this appliance are coloured in accordance with the following code:

Green and Yellow - Earth

Blue - Neutral

Brown - Live

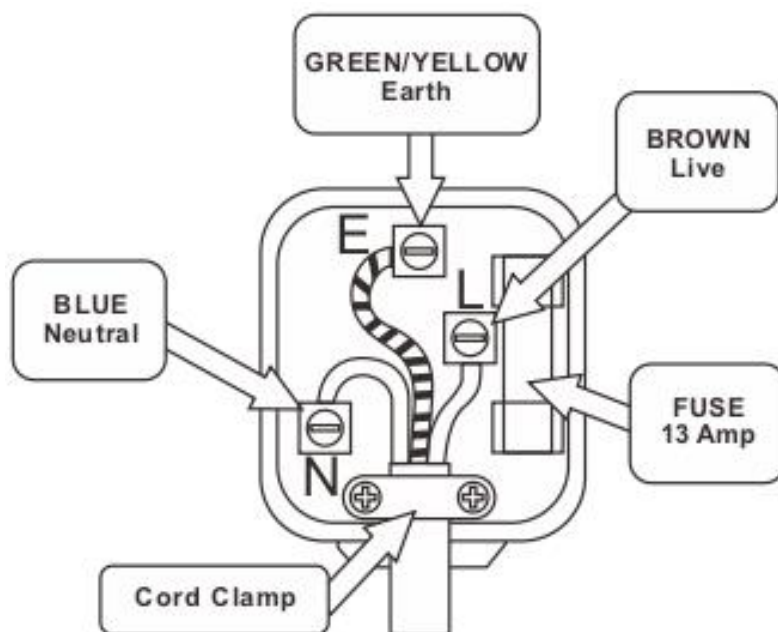


If the wires do not match the colour coding above, please follow the below.


- The green and yellow wire must be connected to the terminal, which is marked with the letter E or with the earth symbol $\equiv$. This colouring will not change.
- The blue wire may be black and must be connected to the terminal marked N.
- The brown wire may be red and must be connected to the terminal marked L.

IMPORTANT: Any cut-off plug should be disposed of safely to prevent a hazard. There is a danger of electric shock if a cut-off plug is inserted into a socket outlet.


PARTS SUPPLIED

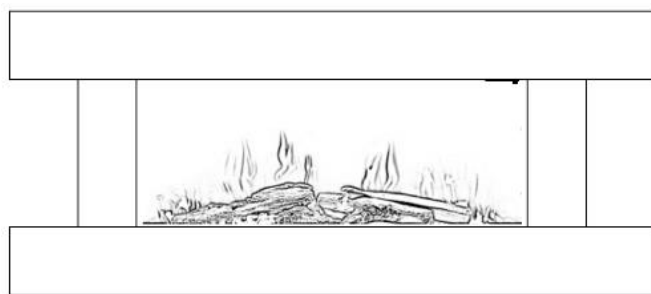

Fireplace

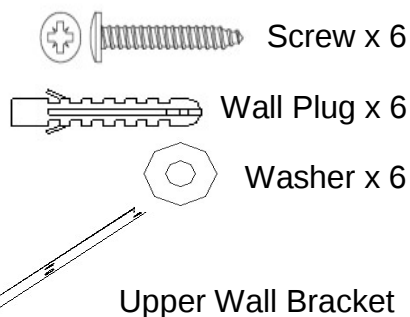


Remote

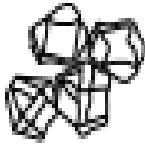SKU			
	0.9Kg Pebbles	0.5Kg Crystals	4 x Logs
AGL037	✓	✓	✓
AGL053	✓	✓	✓
AGL054	✓	✓	✓
AGL055	✓	✓	✓
AGL089	✓	X	✓

PLEASE NOTE: Some parts are packaged within the cavity of the surround on the rear of the fire.

BEFORE USE!

Before using the appliance for the first time, ensure that it has been fully unpacked and that all packaging has been disposed of properly to ensure it does not present a risk to children or animals.

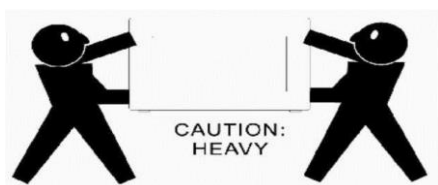

Due to the size and weight of the fire, we would advise two people to carry out the installation to prevent injury or damage.

RF EXPOSURE GUIDELINES


IMPORTANT! To meet RF (Radiofrequency) exposure requirements:

1. A minimum separation distance of 20 cm must be maintained between the device and individuals during operation.
2. Operating the device closer than this distance is not recommended.
3. The antenna used for this transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.


PRODUCT DIAGRAMS

NOTE: All images and diagrams are for illustrational purposes only.


AGL037 (This model is both for free standing & wall mounting.)

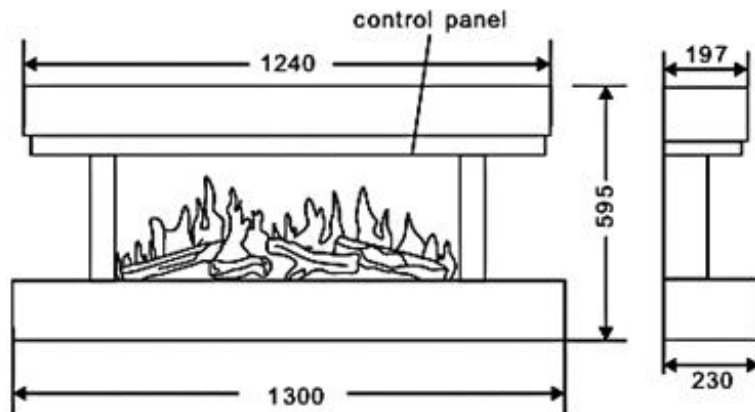


AGL053 / AGL054 (This model is both for free standing & wall mounting.)

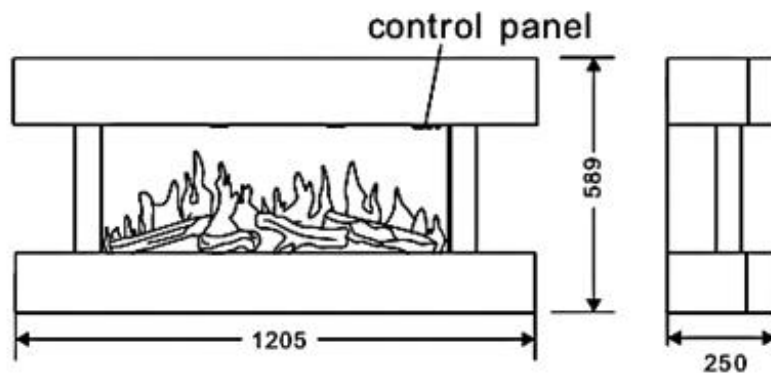

AGL055 (This model is both for free standing & wall mounting.)

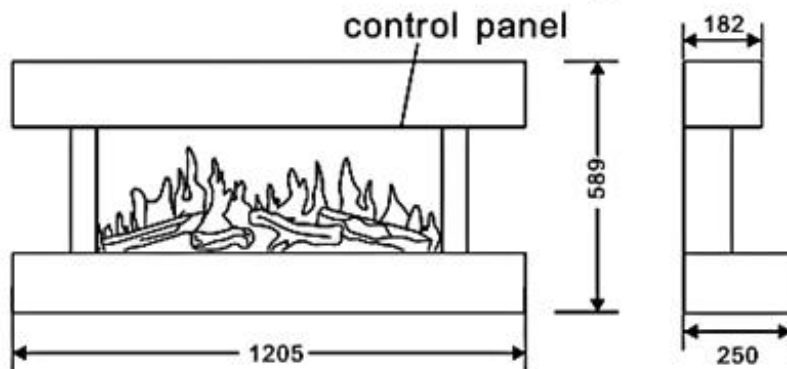


AGL089 (This model is both for free standing & wall mounting.)

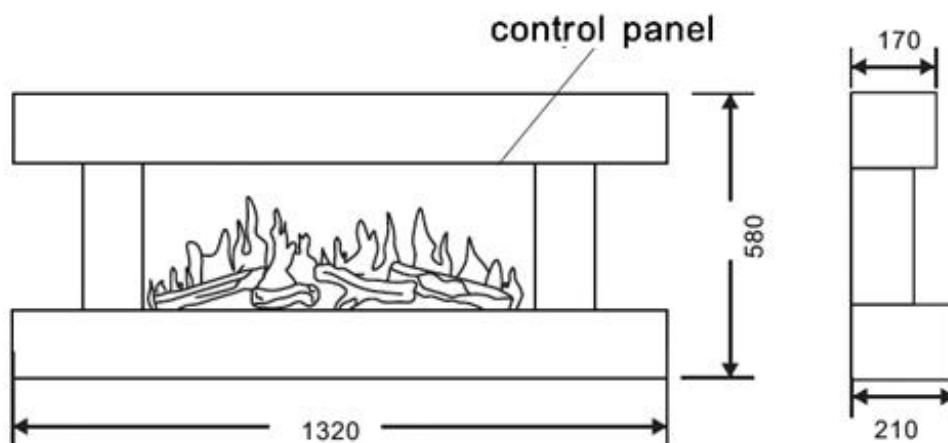

INSTALLATION INSTRUCTIONS

This product is designed to be mounted flat to the wall. Before installation, please ensure that the floor and wall are flat, and there is nothing that would prevent the fire fitting flush.

1. The fire is designed to be permanently fixed to a wall with a minimum distance of 300mm between the base of the fire and the floor. A distance of 600mm is recommended for the optimum height on the wall.
2. The upper bracket should be placed against the wall 490mm above the planned position of the base of the fire.
3. While ensuring that the bracket is level (using a spirit level), mark the position of the six screw holes in the wall.
4. Put the bracket to one side and drill the holes marked in step 3 with an 8mm drill bit to a depth of around 35mm.
5. Clean any dust and debris from drilling, and insert a wall plug into each hole, ensuring they are flush with the wall's surface.
6. Hold the bracket in position and attach it to the wall using six screws.
7. Two people should carefully lift the fire into position, ensuring the top edge of the fire engages with the bracket.
8. Spread the supplied pebbles/branches (model-dependent) in position on the light at the front of the unit.

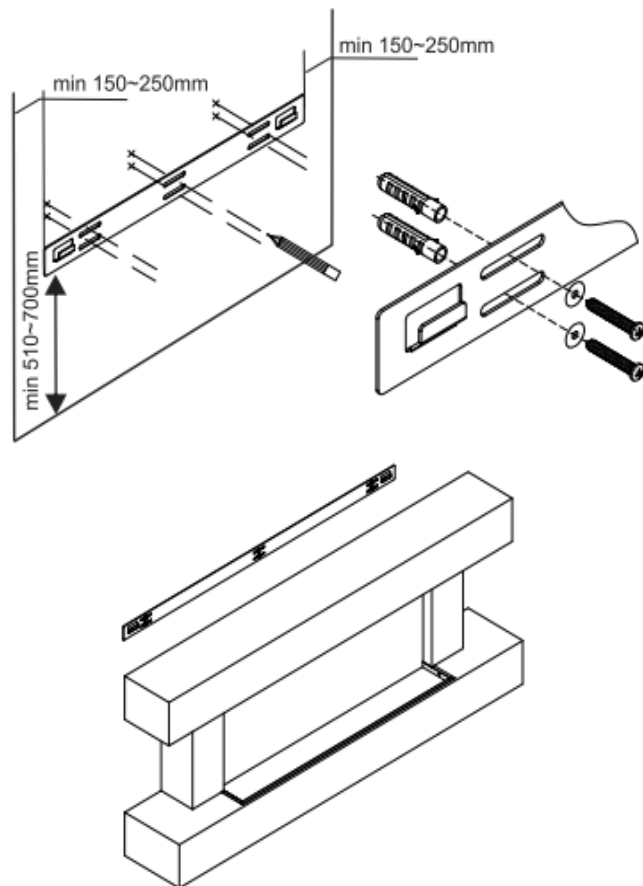


NOTES:

- The wall plugs supplied are designed for solid walls, so a different type of plug may be required depending on the type of wall.
- Before drilling into the wall, you must ensure that there is no pipework or wiring behind the wall which may be damaged during installation.
- A competent person must install the fire. Professional advice should be sought if there is any doubt about the installation or the suitability of the wall or wall plugs supplied.


STEPS TO REPLACE DECORATION (FOR AGL037)

1. Remove the two screws with a Phillips screwdriver.
2. Take off the glass, then put any decorations in the well (small pebble/crystal/log set supplied)
3. Install the glass carefully.

Two holes are provided for the screws for extra security.

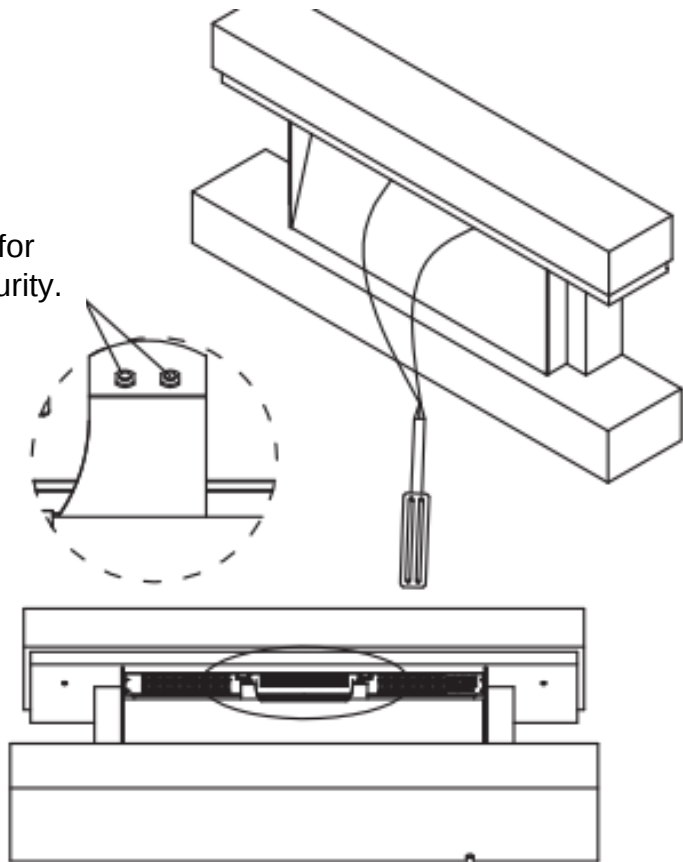


OPERATION

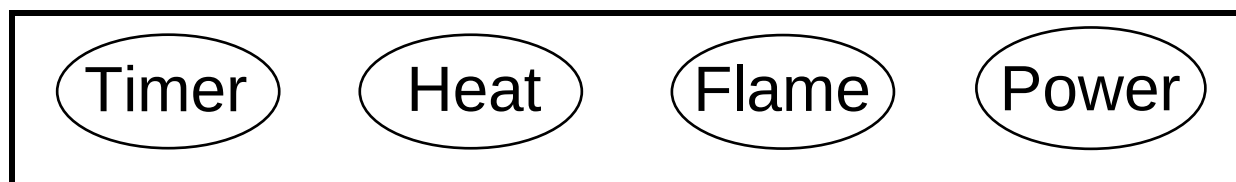


ON/OFF	Press the power button to turn the unit On or Off. In standby mode, press and hold the power button for 3 seconds to set the wireless network (see Wi-Fi connection). Press and hold the power button for 5 seconds in standby mode to toggle between Celsius and Fahrenheit.
FLAME CONTROL	Press the flame button rapidly to adjust the flame brightness. There are five levels, with five being the brightest and one the dimmest. Press and hold the flame button for 5 seconds to enter the flame colour settings. You can choose between the colours: C1 Warm white + Red + Blue. C2 Warm white + Red C3 Red + Blue C4 Warm white + Blue C5 Blue C6 Red C7 Warm white
HEAT CONTROLLER	Press the heat button repeatedly to change the heat level. The heat level is indicated on the display by a bar. A small bar means the heat is LOW, and a large bar means the heat is HIGH. Press and hold the heat button to set the temperature between 18 and 35°C.
TIMER	You can set 0-9 hours in 1-hour increments. As soon as the time you set has elapsed, the fire will automatically go out. To adjust the timer, you will hear a beep and "F1" will be displayed on the screen. Then, press the timer button repeatedly to select one of the colours. Once you reach "F9", the setting mode is exited, and the colour selection starts again. F0 Turn off the spot light F1 Red F2 Green F3 Blue F4 Red + Blue F5 Red + Green F6 Blue + Green F7 White F8 Orange F9 Gradual change (from F1 to F8)

REMOTE CONTROL

Power Button		Press to turn the appliance On and Off.
Flame Button		To adjust the flame brightness, press this button once and then adjust the flame brightness using the arrow buttons. Press the flame button twice to adjust the flame colour, then use the Arrow buttons to switch between flame colours (C1-C7).
Arrow Buttons	 	Press these buttons to select between the different heating levels. The level you select is shown on the heat indicator. When the small bar lights up, a low heating level is set. When both bars are lit, a high heating level is set.
Temperature Button		Press this button once and use the arrow buttons to select the desired temperature (18-35°C).
Timer On / Off		Press this button while the unit is on to set the time until it switches off automatically. You can set 0-9 hours in 1-hour increments. As soon as the time you set has elapsed, the fire will automatically go out. To adjust the timer, you will hear a beep and "F1" will be displayed on the screen. Then, press the timer button repeatedly to select one of the colours. Once you reach "F9", the setting mode is exited, and the colour selection starts again.

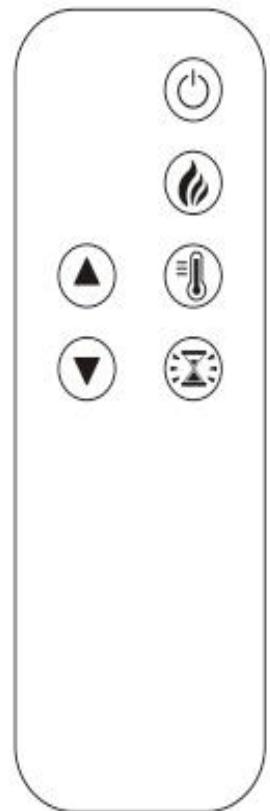

DISPLAY

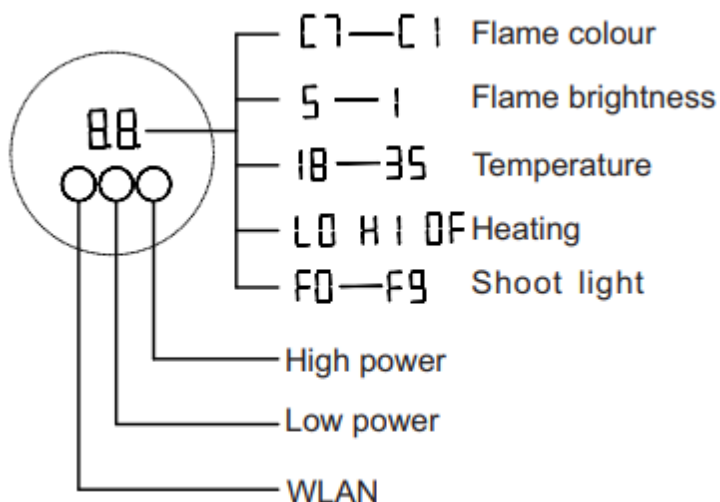

DOWNLOADING THE APP

NOTE: The images in this manual are for illustration purposes only. The app is subject to updates, and its interface may change over time.

There are three ways to download the Tuya Smart app:

1. Open your phone browser and go to **smartapp.tuya.com/tuyasmart**. Select your country and press **Download**.
2. Search for **Tuya Smart** in the Apple App Store (iOS) or Google Play Store (Android). Look for the QR icon for reference.
3. Scan the following QR code to be directed to the download page.



REGISTERING ON THE APP

1. Open the app, read the User Agreement & Privacy Policy, and press **Agree**.
2. On the login screen, select **Sign Up**.
3. Select your country and enter your email address.
4. Tick the box to **agree to the terms and conditions**.
5. Press **Get Verification Code**.
6. Check your email inbox and enter the six-digit code in the app.
7. Set a password (6 to 20 characters, including letters and numbers).
8. Select or deselect Service Maintenance & Improvement Activity and Personalised Recommendations based on your preference.
9. Press **Go to App**. You will now be taken to the Tuya Smart home screen.

NOTE: After signing in to the Tuya Smart app for the first time, a pop-up message may appear on the home screen. Follow the on-screen instructions if you wish to enable or access additional features for the home screen.

SETTING UP THE WI-FI (2.4GHZ CONNECTION)

NOTE: If you are unsure about your router settings, contact your **internet provider** for assistance. To connect the unit via Wi-Fi, ensure your router supports **dual-band Wi-Fi** (2.4GHz and 5GHz) and that the 2.4GHz band is available. You can check this in one of the following ways:

1. **If your router already has a 2.4GHz network**, temporarily disable the 5GHz band while setting up the unit. You may re-enable it after setup.
2. **If your router does not have a separate 2.4GHz network**, enable it through your router settings:
 - Open a web browser and enter your router's **IP address** (found on the back of your router).
 - Login to your router settings and look for Wi-Fi or network settings.
 - Follow your provider's instructions to enable 2.4GHz Wi-Fi.
3. **Alternatively, contact your internet provider** to assist with enabling 2.4GHz Wi-Fi.


Once the 2.4GHz network is enabled, connect your phone to it before setting up the unit.

BEFORE YOU START

- Decide whether you will connect the unit via **Bluetooth, Wi-Fi (2.4GHz only), or both**.
- Place the unit **close to the router** during initial setup.
- Ensure the unit remains **within range of the Wi-Fi signal** for normal operation.
- Please note that all app images and diagrams are solely for illustrational purposes as it is subject to continual improvement and further updates.


SETTING UP YOUR HOME WITHIN THE APP

TUYA is designed to work with many compatible smart devices within your home and multiple devices within different houses. As such, during the setup process, the app requires that different areas be created and named to allow easy management of all your devices. When added, devices are assigned to one of the rooms you created.

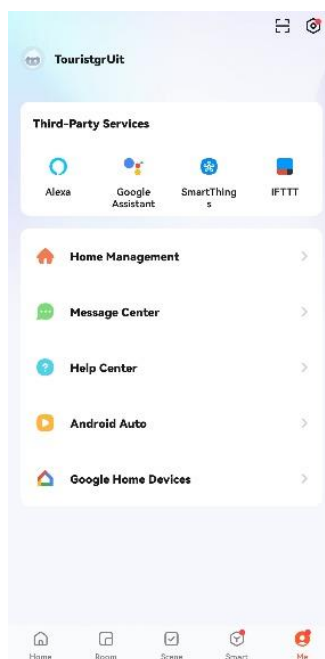


TO CREATE A HOME

1. Press **Me** on the bottom right of the Home screen.
2. Press **Home Management**, then **Create a Home** button.
3. Type in a name for your home
4. Press the **location** button to select the location of your home. (See **SETTING YOUR LOCATION** below)
5. New rooms can be added by pressing the **Add another room** option at the bottom.
6. Untick any rooms that are not required on the app.
7. Press **Done** in the top right corner.

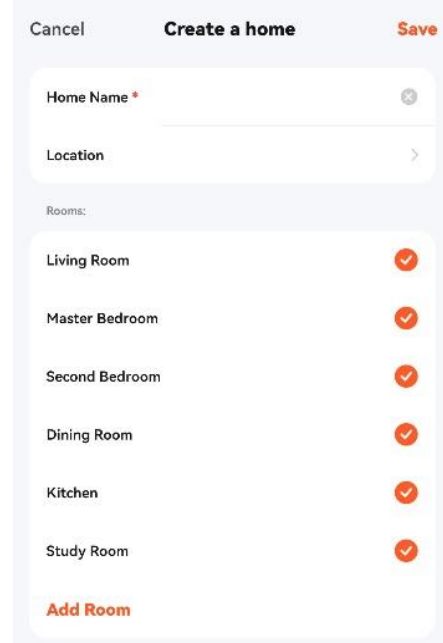


SETTING YOUR LOCATION

Use your finger to move the orange **Home** symbol. When the symbol is in the approximate location of your home, press the **confirm** button in the top right corner.

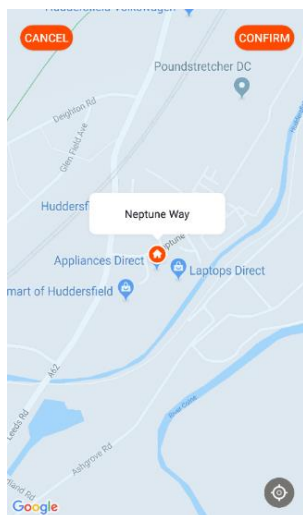

ADD ANOTHER ROOM

Type in the room's name, and press **Done** in the top right corner.

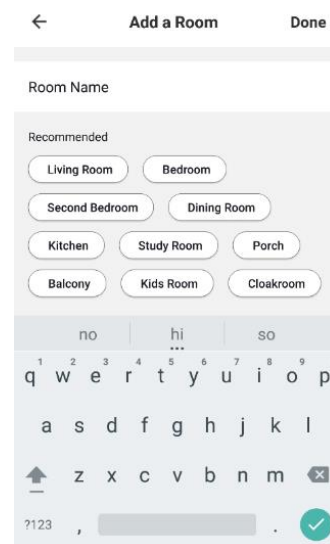

CONNECTION METHODS AVAILABLE FOR SETUP

The smart device has two setup modes: **QUICK CONNECTION** and **AP (Access Point)**.

The automatic connection is a quick and simple way to set the unit up. AP connection uses a direct local Wi-Fi connection between your phone and the electric fireplace to upload the network details.


Before starting the setup, please ensure that your unit is in the correct standby mode for the connection type you are attempting.

Hold the **POWER** button for 3 seconds to activate pairing mode while the unit is on standby.


CONNECTING USING THE QUICK CONNECTION METHOD

Before initiating the connection, ensure the Wi-Fi indicator flashes twice per second. If not, follow the instructions for changing the connection mode. Also, ensure your phone is connected to the Wi-Fi network. (We advise turning mobile data off during setup)

1. Open app and press “+” to add device, or use the add device button

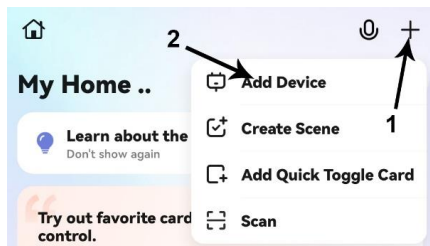

2. Select the type of device as “Electric Fireplace” within the Home Appliance tab.

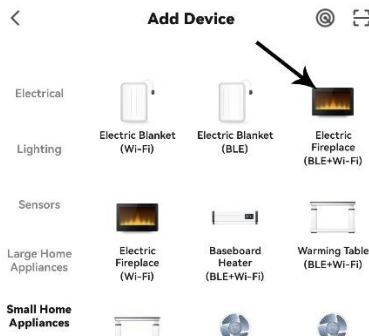

3. Enter your Wi-Fi password and press confirm

Select 2.4 GHz Wi-Fi Network and enter password.

If your Wi-Fi is 5GHz, please set it to be 2.4GHz.
[Common router setting method](#)



- 1 [Your 2.4Ghz network]
- 2 Password [Your wifi password]
- 3 [Next](#)


4. Press on the orange button at the bottom of the screen.

× Wi-Fi Mode ⇌

Reset the device




Press and hold the RESET button for 5 seconds until the indicator blinks (subject to the user manual).

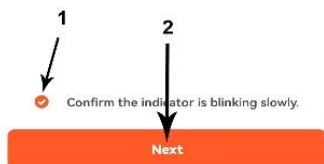






[Reset Device Step by Step](#)

5. This will then transfer the settings to the heater. Wait for this to complete. If this fails, retry.

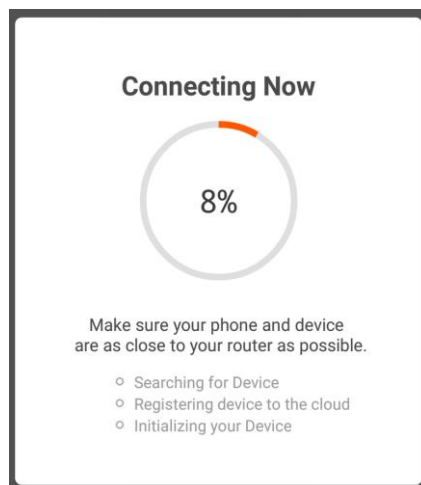

CONNECTING USING AP MODE (ALTERNATIVE METHOD)

Before initiating the connection, ensure the unit is in standby mode, with the Wi-Fi Indicator flashing once per second. If not, follow the instructions for changing the Wi-Fi connection mode. Also, ensure your phone is connected to the Wi-Fi network. (We advise turning mobile data off during setup)

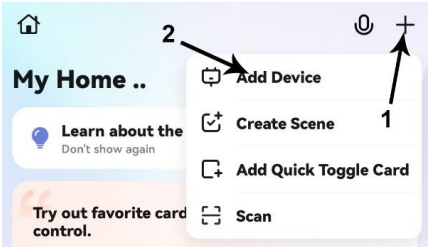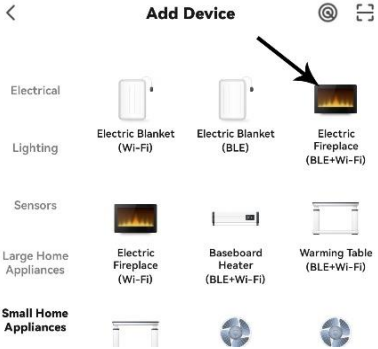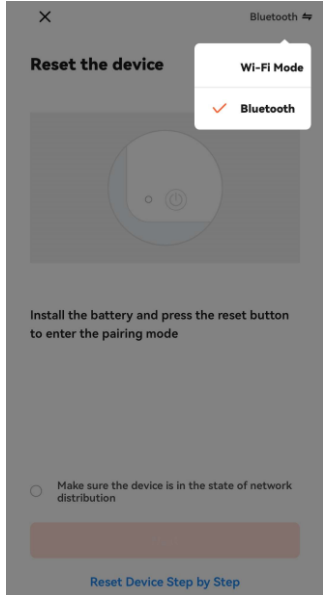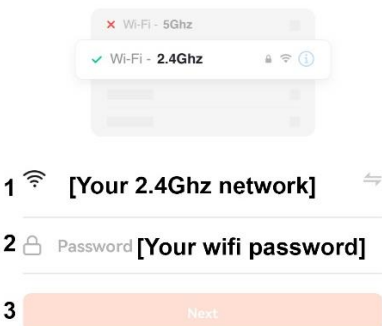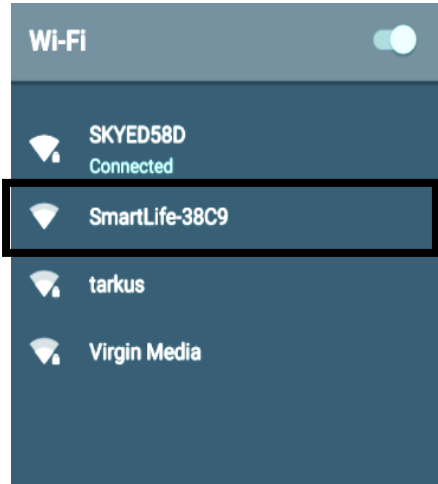1. Open app and press “+” to add device, or use the add device button. 	2. Select the type of device as “Electric Fireplace” within the Home Appliance tab. 	3. Press on the Bluetooth in the top right of the screen. 
4. Ensure the Wi-Fi indicator on the heater is slowly flashing (once per second), then press on the orange button at the bottom of the screen to confirm. 	5. Enter your Wi-Fi password and press confirm. Select 2.4 GHz Wi-Fi Network and enter password. If your Wi-Fi is 5GHz, please set it to be 2.4GHz. Common router setting method 	6. Go to network settings on your phone and connect to the “SmartLife xxx” connection. There is no password to enter. Then, return to the app to complete setup. 
This will then transfer the settings to the heater. Once the connection process has completed, go back to the network settings on your phone to ensure your phone has reconnected to your Wi-Fi router.		

CONTROLLING YOUR APPLIANCE THROUGH THE APP

THE HOME SCREEN

NOTE: Due to the continuous development of the app, the layout and available features may be subject to change.

Each device has its own entry on the home screen to allow the user to either quickly turn the unit on or off or to enter the device screen to make other changes.

Voice Control: Press to give verbal instructions for operation.


Add Device: Add a device to the app and go through the setup process.

Name of Heater: Press to enter the Device Screen

Home: Return to home screen from the Smart Scene and Profile screens

Smart Scene: Allows you to program intelligent behaviour based on the internal and external environment.

Profile: Provides the option for changing settings.

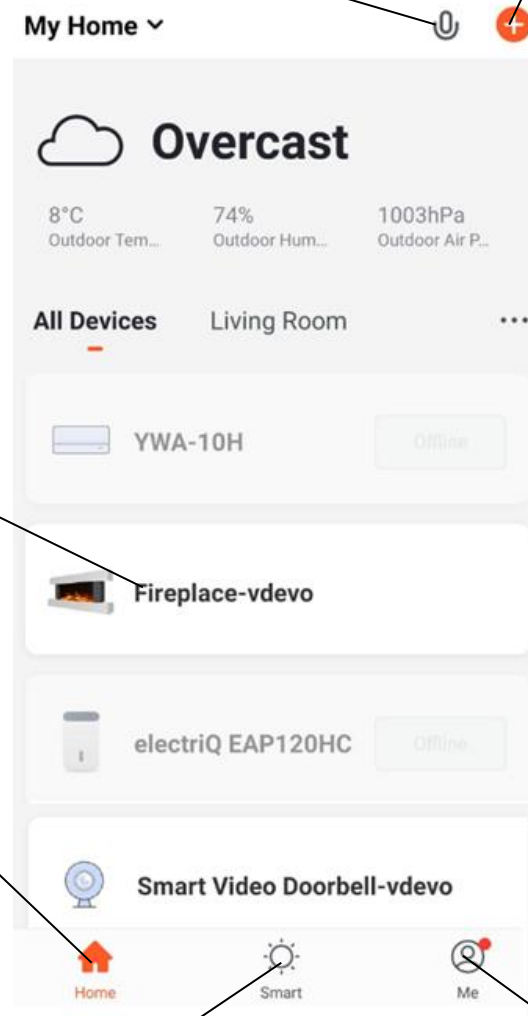

DEVICE SCREEN

The device screen is the main control screen for the heater, providing access to the controls to amend the functions and settings.

Back: Returns to the Home Screen

Device Name

Edit Name: Use to change the name of the heater. Device information and third part control can also be assessed from this menu.

Desired Temperature:
Displays what has been set as the target room temperature.

Current Temperature:
Displays what the current temperature is.

Decrease Desired Temperature

Temperature range 18-35°C

Increase Desired Temperature

Temperature range 18-35°C

Power: Use to turn the unit on or off.


Flame colour: Use to change the flame colour between C1 and C7.

Heating: Use to turn the heating OFF/ON/LOW/HIGH.

Countdown Timer:

Use to set the countdown timer between 1 and 9 hours.

Settings: Enter the settings menu. You can access temperature scale flame brightness downlights colour and the timer schedule.

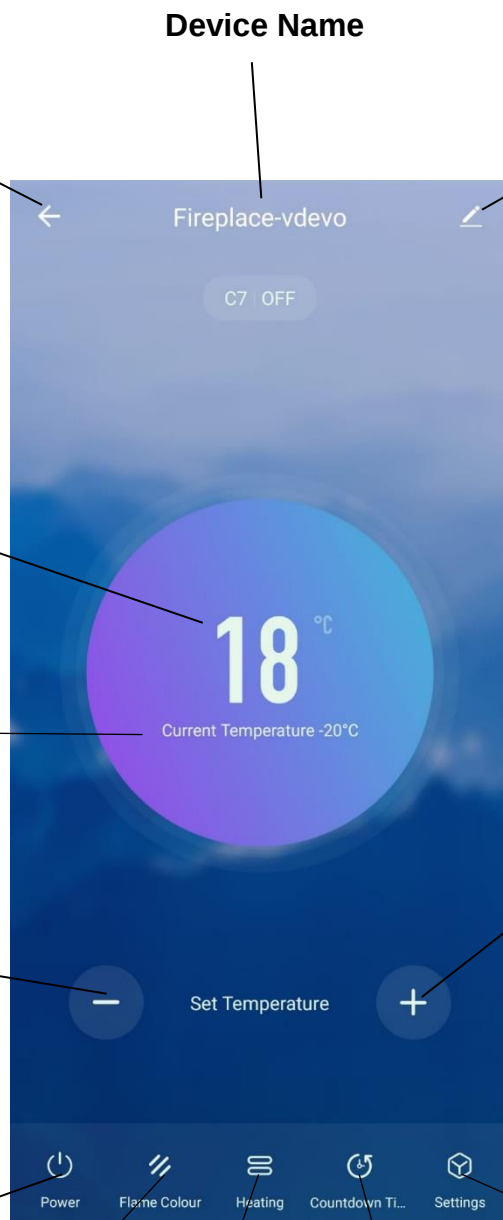

DEVICE SETTINGS

HEAT: To turn the heat on or off.

FLAME COLOUR: Click to change the flame colour.

BACKLIGHT COLOUR: Click to change the backlight colour.

FLAME BRIGHTNESS: Change the flame brightness or turn the flames on or off.

OPEN WINDOWS: Turn on open window detection.

VOLUME: Change the volume of the fire sound effects.

TIMER: Schedule a timer to turn the device on or off.

ADDING A TIMER:

Click add.




Select the time you want the device to turn on or off.

Select 'Repeat' if you would like this to be scheduled for certain days.

You can add a note to name the schedule.

Click 'Switch' to choose if the schedule is to turn on or off the device.

Then click save.

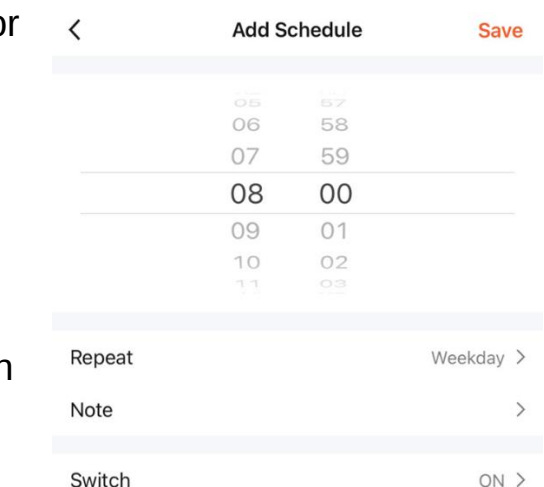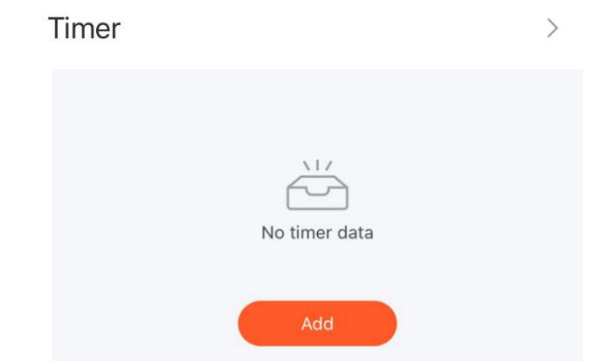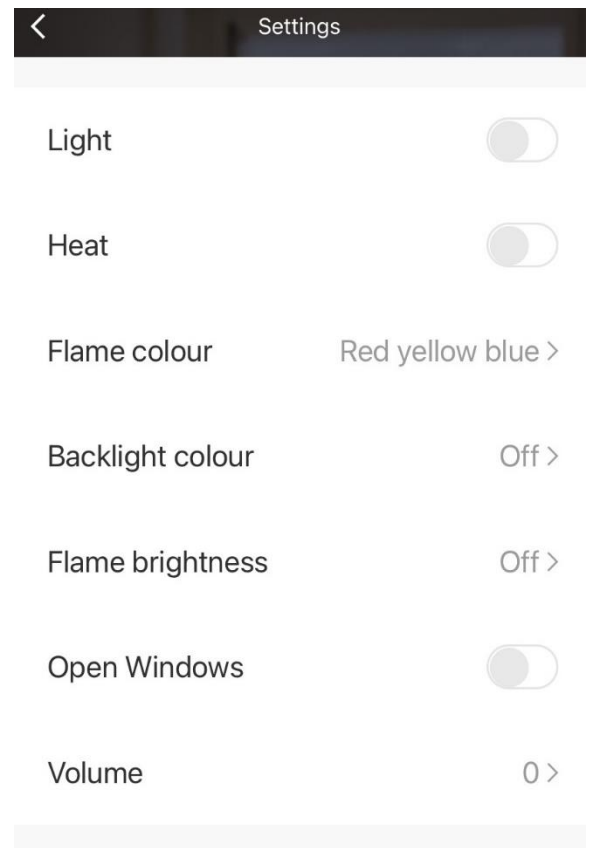

SMART SCENES


Smart Scenes is a powerful tool that allows the user to customise the operation of the air heater based on conditions within the room and outside influences. This gives the user the option of specifying much more intelligent actions. These are split into two categories: Scene and Automation.

SCENE

The scene allows for adding a one-touch button to the Home Screen. The button can be used to change several settings in one go, including all the unit settings. Several scenes can easily be set up, allowing the user to easily change between several pre-set configurations.

AUTOMATION

Automation allows an automatic action to be set up for the device. This can be triggered by the Time and various other influences, depending on what other TUYA-enabled devices you have on the network.

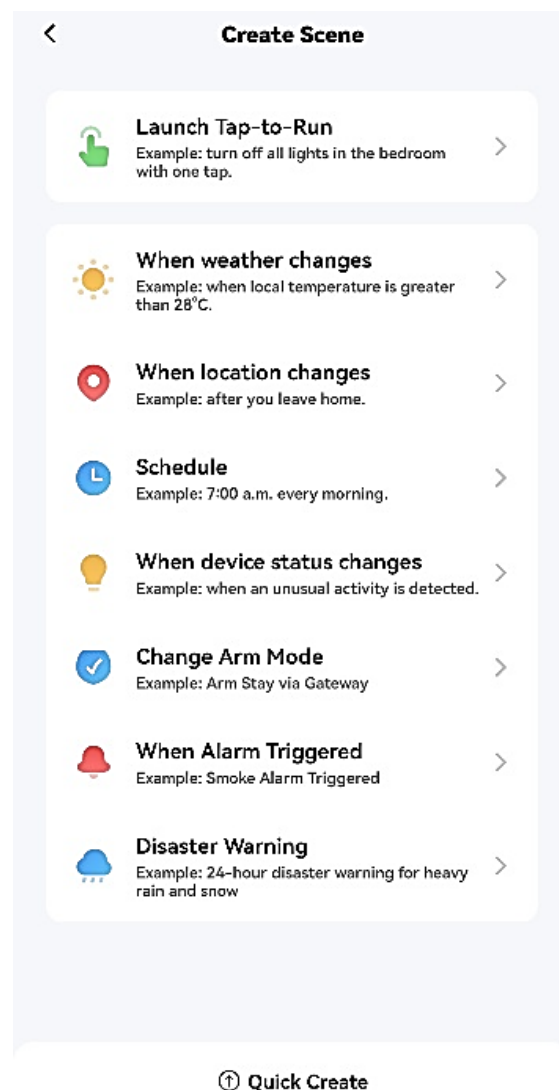

SETTING UP A SCENE / AUTOMATION

1. Press the **Scene** button at the bottom of the home screen.
2. Press the **Create Scene** button or the **+** icon at the top right corner.
3. Select a scene or automation based on the several options available: [S=Scene, A=Automation]

S	Launch Tap-to-Run	Manually activate a scene with one tap.
A	When the Weather Changes	Trigger actions based on temperature, humidity, or weather (e.g. rain, snow).
A	When Location Changes	Automate devices when arriving at or leaving a location.
A	Schedule	Run actions at specific times or days (e.g. 7:00 AM daily).
A	When the Device Status Changes	Trigger actions when another device changes state (e.g., the heater turns on when the door opens).
A	Change Arm Mode	Automatically change security system mode (Arm, Disarm, Stay).
A	When Alarm Triggered	Activate actions when a device alarm goes off (e.g. smoke alarm).
A	Disaster Warning	Trigger scenes in response to government-issued weather alerts.

4. When creating a scene or automation (except for "Launch Tap-to-Run"), you'll need to set a precondition and define the action to be performed when that condition is met. Actions can include changing the arm mode, switching the appliance on or off, adjusting the temperature, changing the operating mode, enabling or disabling the child lock (if available), activating another scene, sending a notification, or adding a delayed action. You will also need to select the specific appliance that the scene will control.

NOTE: The "more settings" button allows you to customise the icon for the scene or automation and the room to which you would like this to apply.

5. Once you have the precondition (If), the function to perform for the selected appliance (Then), and your preferential settings, press the save button, name your Scene or Automation, and confirm.

NOTE: Some functions and features under Smart Scenes and Automation may not be available. The application is subject to continual improvement and development.

PROFILE TAB

THIRD-PARTY SERVICES

Integrate your devices with voice assistants and automation services for hands-free control and smart scheduling.

Alexa / Google Assistant / SmartThings / IFTTT

- These options let you link your Tuya-compatible devices to third-party platforms for voice commands, routines, or advanced automation workflows.

HOME MANAGEMENT

Allows you to manage your Tuya smart home environment.

- Create and customise homes
- Add or remove rooms
- Share control of devices with family members or housemates

MESSAGE CENTER


Shows system and device notifications.

- View alerts from smart devices (e.g., if an alarm is triggered)
- See activity logs or system messages related to your setup

HELP CENTER

Offers FAQs and basic troubleshooting support.

- Browse frequently asked questions
- Learn how to use features or solve common problems
- Find contact options for support (depending on region)

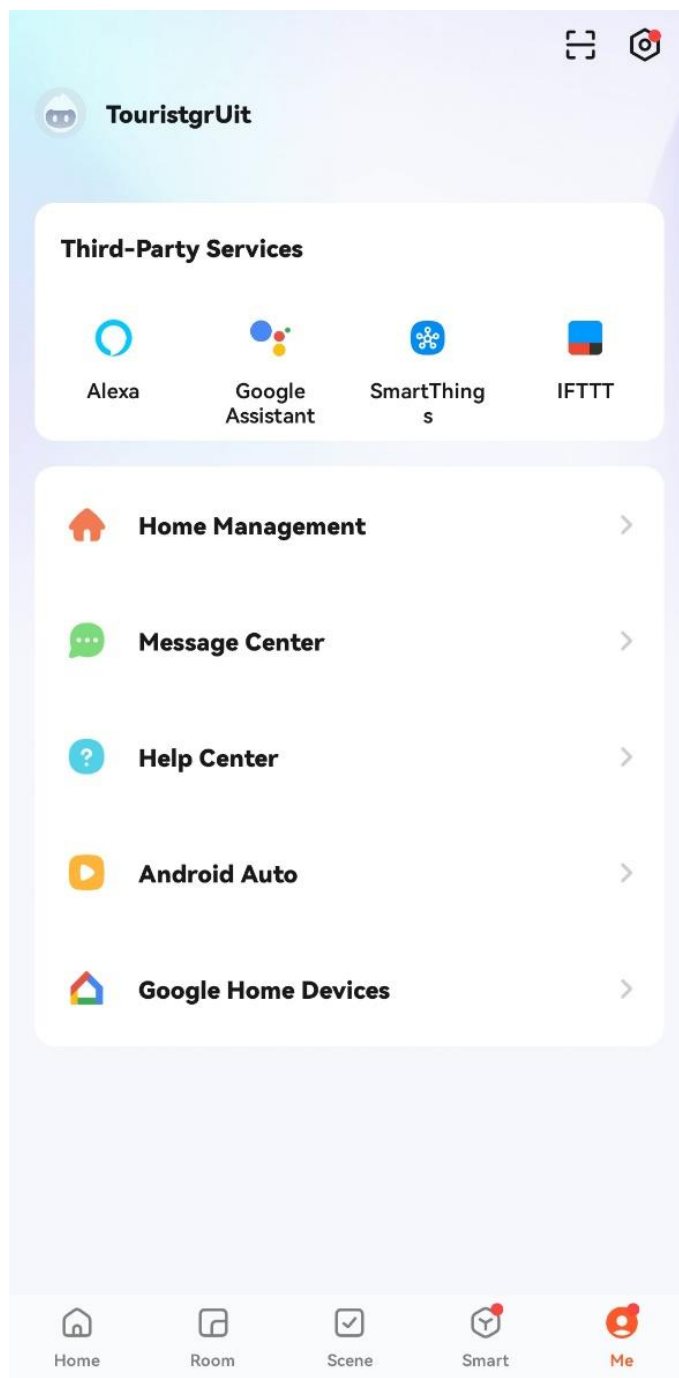

CARE AND MAINTENANCE

Before cleaning the appliance, the power supply should be disconnected, and the unit should be allowed to cool.

Dust can be removed by lightly wiping the glass surface with a clean, lint-free cloth or paper towel. Use a damp cloth with a good-quality household glass cleaner to remove fingerprints or other marks. The front glass panel should be completely dried before reusing the heater.

CAUTION:


- Do not use an abrasive cleaner on the glass panels.
- Do not spray liquids directly onto any surface of the unit.
- Do not clean the glass on the inside of the unit, as this may cause damage to the surface.

REPLACING THE BATTERIES

The batteries are not included with your remote. You will need 2x AAA 1.5 V batteries.

To insert the batteries:

1. Push the tab down towards the bottom of the remote to unclick the cover, then remove it.
2. Insert the batteries following the polarities on them and the remote.
3. Slide the tab for the cover into the remote and click back into place.

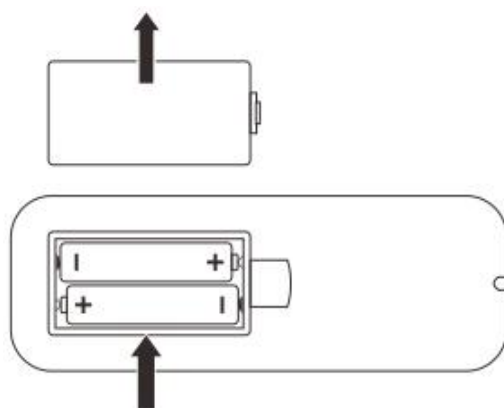

TECHNICAL SPECIFICATION

Description of Product	Electric Wall Hanging Fire				
Rated Voltage	220-240V ~				
Rated Frequency	50/60 Hz				
Rated Power	Max 2000W				
Model	AGL037	AGL053	AGL054	AGL055	AGL089
Dimensions (mm)	1300 (W)	1205 (W)	1205 (W)	1205 (W)	1320 (W)
	595 (H)	589 (H)	589 (H)	589 (H)	580 (H)
	250 (D)	250 (D)	250 (D)	250 (D)	210 (D)
Net Weight	30.5Kg	25.5Kg	25Kg	24.7Kg	23.5Kg

WI-FI CONNECTION TROUBLESHOOTING (TUYA SMART APP)

If you experience difficulties connecting your device to the Tuya Smart app, refer to the table below for common issues and solutions.

ISSUE	POSSIBLE CAUSE	POSSIBLE SOLUTION
Device not found during setup	• Appliance is too far from the router. • Mobile phone is connected to a 5GHz network. • Wi-Fi interference or weak signal.	• Ensure your phone is connected to a 2.4GHz Wi-Fi network. • Place the appliance closer to the router during setup. • Restart your router and phone before retrying.
Wi-Fi indicator not blinking	• Device is not in pairing mode. • Incorrect pairing mode selected.	• Hold down the Power button for 3 seconds while the unit is in standby mode to turn the Wi-Fi on.
Unable to connect to Wi-Fi	• Incorrect Wi-Fi password. • Router limitations or signal issues. • Check router settings	• Verify the Wi-Fi password is correct. • Avoid Wi-Fi names (SSID) with special characters. • Ensure your router is not using MAC filtering or firewall blocks. • Place the device closer to the router during setup. • Encryption should be WPA2-PSK, and the authorization type should be set to AES.
The device was added but did not respond in the app	• Connection was incomplete. • App lacks required permissions.	• Restart the Tuya Smart app and check if the device responds. • Ensure the app has access to Bluetooth, Location, and Nearby Devices in your phone's settings. • Remove and re-add the appliance if needed
Stuck during pairing	• Too many connection attempts in a short time. • Wi-Fi signal interruption.	• Wait at least 10 seconds before restarting the pairing process. • Power cycle the device before retrying.
Frequent disconnections	• Weak Wi-Fi signal. • Network instability.	• Move the router closer or use a Wi-Fi extender. • Keep the device away from thick walls or electronic interference (e.g., microwave ovens). • Ensure the router firmware is up to date.

WARNING: Do not attempt to open, disassemble, or modify the unit. Doing so may result in electric shock, damage to the appliance and voiding of the warranty.

If the above troubleshooting is unable to fix the issue, you may refer to your internet provider for issues concerning network connections and may find suitable fixes for Tuya-related issues or queries on the link: <https://support.tuya.com/en/help>

If issues persist, please do not hesitate to contact customer service.

TROUBLESHOOTING

Most problems are simple to resolve - please refer to the following table before calling a service engineer:

Problem	Possible Cause	Check
The fire has stopped working.	The fire has overheated, the thermal safety device has been activated, or a circuit breaker has tripped.	Check there is power in the socket where the fire is connected, check the fuse in the plug, check the main power switch on the unit is turned on, and leave for 10 minutes in case of thermal cut-out.
The flame is not moving.	Flame motor defective	Contact the retailer or manufacturer.
E4 Flashes / Unit stops heating.	Open window detection is active. This is active when the unit first runs and will need to be manually turned off if you wish. We recommend keeping this active to save energy.	Click any button on the remote when E4 flashes to deactivate the mode.

SERVICING

It is hazardous for anyone other than a qualified service technician to carry out any service or repair operation involving removing any components. The lighting for the flame effect is by LED bulbs, designed to last for the product's life and are not user replaceable.

WASTE ELECTRICAL RECYCLING

Disposal: Do not dispose of this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.



Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers can take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.

SUPPORT

For your convenience, please make these simple checks before calling the service line.
If the unit still fails to operate, call 0330 390 3062 or complete the online form.

1. Is the unit plugged into the mains?
2. Is the fuse OK?
3. Switch the unit off and wait ten minutes to see if the issue is resolved. Restart the unit.

Office hours: 9 AM - 5 PM, Monday to Friday

BuyItDirect

Unit 2A, Trident Business Park,

Neptune Way, Leeds Road,

Huddersfield, HD2 1UA.



PSTI STATEMENT OF COMPLIANCE

Description: Electric Wall Mounted Fireplace

Model Number: AGL037, AGL053, AGL054, AGL055, AGL089

Manufacturer: Buy It Direct, 2A Trident Business Park, Leeds Road, Huddersfield, HD2 1UA

PSTI Contact: TiSecurity@buyitdirect.co.uk

We have prepared this statement of compliance and can confirm that this product is compliant with the deemed compliance conditions in Schedule 2 of The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023.

Duration of security updates: 30/12/2029. This date is correct at the time of printing, but we may extend it. Please visit www.furniture123.co.uk for the latest information and details of our PSTI compliance.

A handwritten signature in black ink, appearing to read 'RL', is positioned above the name Richard Leach.

Richard Leach

Compliance and Quality Manager, Buy It Direct, Huddersfield

25th June 2025

EU DECLARATION OF CONFORMITY

Hereby, Furniture123 declares that these electric fireplaces are in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet addresses:

<https://furniture123.co.uk/files/DOC/EU/AGL037.pdf>

<https://furniture123.co.uk/files/DOC/EU/AGL053.pdf>

<https://furniture123.co.uk/files/DOC/EU/AGL054.pdf>

<https://furniture123.co.uk/files/DOC/EU/AGL055.pdf>

<https://furniture123.co.uk/files/DOC/EU/AGL089.pdf>

UK DECLARATION OF CONFORMITY

Hereby, Furniture123 declares that these electric fireplaces are in compliance with the Radio Equipment Regulations 2017.

The full text of the UK Declaration of Conformity is available at the following internet addresses:

<https://furniture123.co.uk/files/DOC/UK/AGL037.pdf>

<https://furniture123.co.uk/files/DOC/UK/AGL053.pdf>

<https://furniture123.co.uk/files/DOC/UK/AGL054.pdf>

<https://furniture123.co.uk/files/DOC/UK/AGL055.pdf>

<https://furniture123.co.uk/files/DOC/UK/AGL089.pdf>

PRODUCT FICHE

Model Identifier: AGL037 / AGL054 / AGL055								
Item		Symbol	Value	Unit		Item		Unit
Heat Output						Type of heat input, for electric storage local space heaters only (select one)		
Nominal heat output		P _{nom}	2.0	kW		manual heat charge control, with integrated thermostat		No
Minimal heat output		P _{min}	1.0	kW		Manual heat charge control with room and/or outdoor temperature feedback		No
Maximum continuous heat output		P _{max}	2.0	kW		electronic heat charge control with room and/or outdoor temperature feedback		No
Auxiliary electricity consumption						fan assisted heat output		No
At nominal heat output		e _{lmax}	N/A	kW		Type of heat output/room temperature control (select one)		
At minimum heat output		e _{lmin}	N/A	kW		single stage heat output and no room temperature control		No
In standby mode		e _{lsb}	2.0	W		two or more manual stages, no room temperature control		No
						with mechanical thermostat room temperature control		No
						with electronic room temperature control		No
						with electronic room temperature control plus day timer		No
						with electronic room temperature control plus week timer		Yes
						Other control options (multiple selections possible)		
						room temperature control with presence detection		No
						room temperature control, with open window detection		Yes
						with distance control option		Yes
						with adaptive start control		No
						with working time limitation		No
						with black bulb sensor		Yes
Contact Details		BuyItDirect, Unit 2A, Trident Business Park, Neptune Way, Leeds Road, Huddersfield, HD2 1UA. The Black Church. St Mary's Place. Dublin 7.						

Model Identifier(s): AGL053 / AGL089							
Item		Symbol	Value	Unit	Item		Unit
Heat output					Type of heat input, for electric storage local space heaters only (select one)		
Nominal heat output		P _{nom}	2.000	kW	single stage heat output and no room temperature control		[no]
Minimal heat output (indicative)		P _{min}	1.000	kW	two or more manual stages, no room temperature control		[no]
Maximum continuous heat output		P _{max,c}	2.000	kW	with mechanic thermostat room temperature control		[no]
Power consumption					with electronic room temperature control		[no]
In off mode		P _o	N/A	W	electronic room temperature control plus day timer		[yes]
In standby mode		P _{sm}	0.40	W	Other control options (multiple selections possible)		
In idle mode		P _{idle}	N/A	W	room temperature control, with presence detection		[no]
In network standby		P _{nsm}	0.81	W	room temperature control, with open window detection		[yes]
Standby mode with display of information or status				[no]	distance control option		[yes]
Seasonal space heating energy efficiency in active mode		η _{S,on}	94.0	%	adaptive start control		[no]
					working time limitation		[yes]
					black bulb sensor		[no]
					self-learning functionality		[no]
					control accuracy		[no]
Buy It Direct, Unit 2A, Trident Business Park, Neptune Way, Leeds Road, Huddersfield, HD2 1UA. Buy It Direct, The Black Church, St Mary's Place, Dublin 7.							