


electricIQ

iQ Kitchen Scale

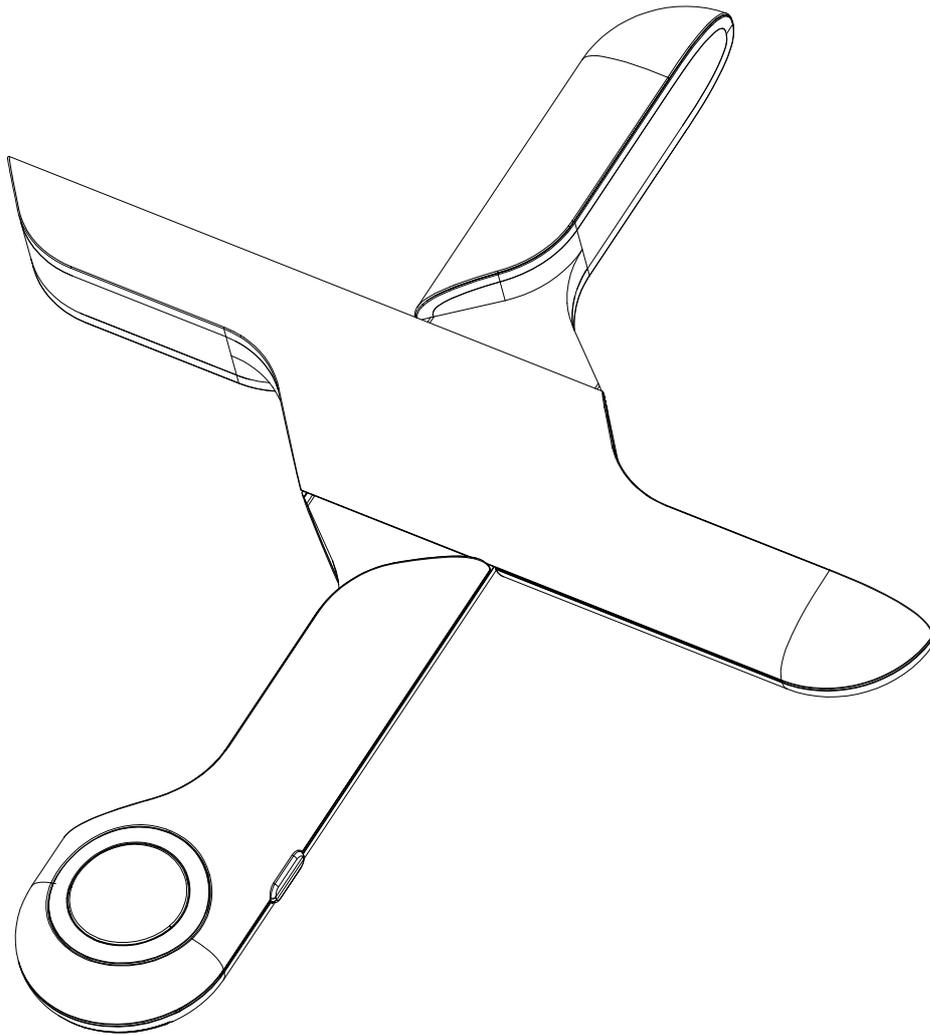

Thank you for choosing ElectrIQ




Please read this user manual before using this kitchen scale and keep it safe for future reference.

Visit our page www.electrIQ.co.uk for our entire range of Intelligent Electricals

Your new electriQ Kitchen Scale

This incredibly simple and neat scale can be used to weigh anything up to 5 Kg and can be easily folded away for storage in even the smallest kitchen.

Getting Started

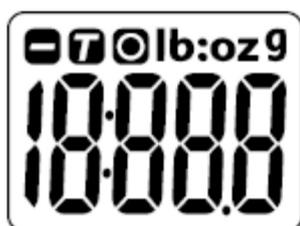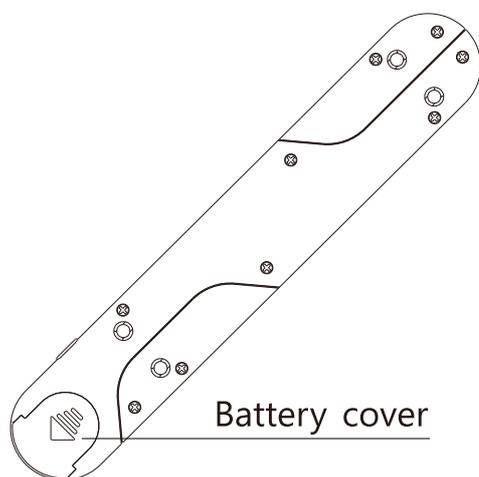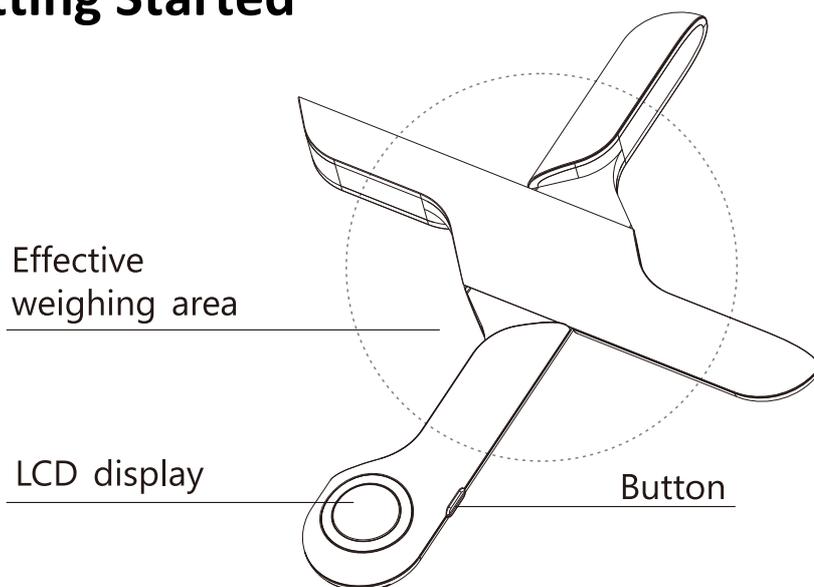

-  Tare weight
-  Negative value
-  Zero weight
- g** Gram
- lb:oz** Pound:Ounce

Open the scale out until all the arms are spread fully at 90° and place on a flat, level surface. Press the button to turn on the scale, the LCD display will illuminate. Wait for the scale to go to zero before placing anything on it. You can now place the item you want to weigh on the scale (making sure it stays within the effective weighing area).

Tare Function (Zero)

Place the item you want to Tare off the scale (bowl or plate for example) and press the button on the scale. The LCD display will return to zero. You can now add the items you want to weigh.

In the event that when you turn on the scales they don't return to zero, simply allow them to settle then press the button, this will zero the scales.

Unit Conversion

The scales can be used to measure in both metric (g) and imperial (lb:oz). Simply press and hold the button for 5 seconds and the display will change to the other units.

Turning Off

The scales will turn themselves off after around 2 minutes of inactivity. It doesn't need manually switching off.

Warnings

The unit has 2 built in warnings:

1. Lo – This indicates that the battery is low and requires replacing
2. Err – This indicates that the scale is overloaded. Remove the load as leaving it in place may damage the scale.

Care and Maintenance

- Clean the scale with a damp cloth. Do not immerse in water or use chemical or abrasive cleaning agents.
- All plastic parts should be cleaned immediately after contact with fats, spices, vinegar or strongly flavoured/coloured foods.
- Always use the scale on a hard, flat surface.
- DO NOT strike, shake or drop the scale.
- Store the scale in a cool dry place.
- If the scale fails to switch on, check if the battery is correctly installed or the power is low.
- To replace the battery, remove the battery cover using a flat tool or coin. Remove the battery and replace with a new one. Place the battery in with the positive face facing you. Replace the battery cover. The battery is a 3V CR2032.



PRODUCT DISPOSAL

Do not dispose this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.

electriQ UK SUPPORT

Complete online support form on www.electriQ.co.uk/support

Service Line: 0871 620 1057

Office hours: 9AM - 5PM Monday to Friday

www.electriQ.co.uk

Unit 2, The Nursery

Berristow Lane South Normanton

Derbyshire, DE55 2FX