

Installation Notice


1. Identify all components are present prior to installation.
2. Suitable for bath thickness: 5-25mm.
3. Flush pipes to remove any debris in pipes before installation.

Installation Steps

1. Unscrew the screw (6).
2. Insert the rubber washer (4) on the overflow cap (5), then insert the rubber washer (3) on the overflow elbow (2).
The screw (6) passes through the hole of overflow cap (5), connect with overflow elbow (3).
3. The overflow cap (5) which connects with the S ring should be underneath, then tighten the screw (6) (As shown on the image).
4. Unscrew the screw (9), take out the foam washer (11) and waste flange (10).
5. Place the waste flange and foam washer (11) on the drain hole, then place the waste body (13) and rubber washer (12) at the bottom of the drain hole. The screw (9) passes through the waste flange (10), connect with waste body (13) (As shown on the image).
6. Align the overflow hole of waste body (13) with overflow elbow (2), then tighten the screw (9), install the plastic pipe (14) (As shown on the image).
7. Place the plug (8) on the flange (10).
8. Check all joints and connections for leakage once the installation is complete.

Aftercare

The end user is required to regularly maintain and clean using warm soapy water and a soft cloth for the product warranty to be valid. Surfaces should be maintained using a clean damp cloth, NO corrosive and abrasive agents or materials should be used or come into contact with the surface finish, as this will invalidate your product warranty.

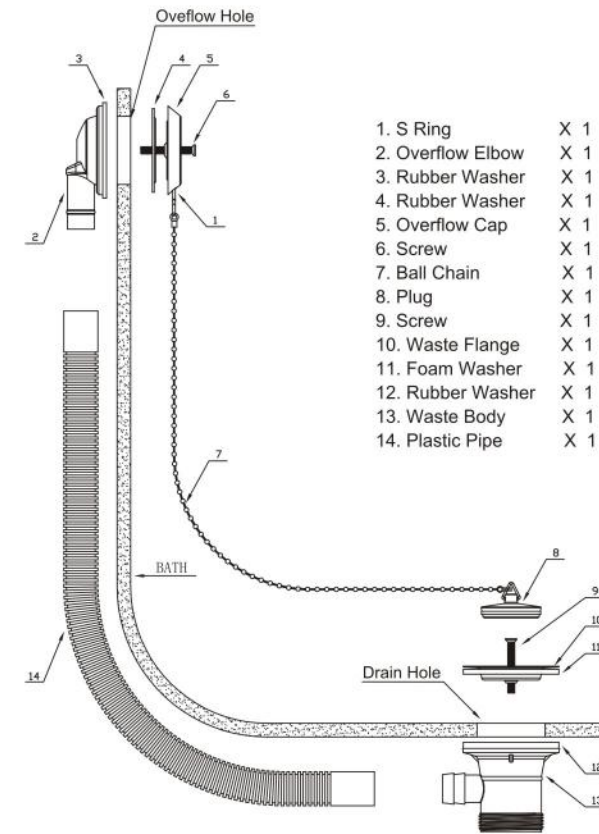

Once assembled, fill the bath with water, check for leaking.

