BeBa-26079~BeBa-26090 BeBa-26091~BeBa-26092 BeBa-27452 & BeBa-27453

The micro protective layer formed during its application will make the water bead along the glass for easy maintenance.


We recommend cleaning the door with the squeegee after each use.

THE MAINTENANCE OF YOUR SHOWER

Never use of powder or scouring pads. Simply clean the door with a solution of water and vinegar, 1 to 5. You can use a mild detergent but never use ammoniac, it could damage the glass surface.

REVERSIBLE DOOR

Les instructions montr é s au manuel sont pour le montage de la porte droite. The instructions shown in the manual is for the installation of the right door.

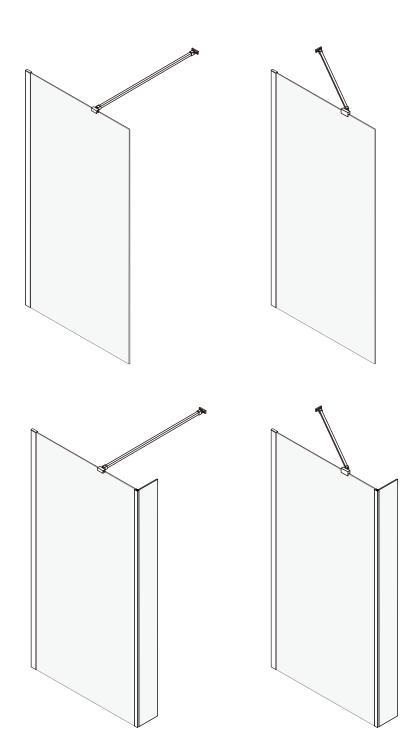

INSTALLATION MANUAL


IMPORTANT

- Thoroughly inspect your product before proceeding with the installation.
- The warranty will be void if the productis installed with a conspicuous defect.
- Before commencing drilling please check that no pipes or cables can be damaged.

CAUTION


- To prevent leaks, silicone must be applied on the outside of the shower and not on the inside!
- Read all instructions carefully before starting the installation.
- Save this manual for future reference.

PARTS LIST

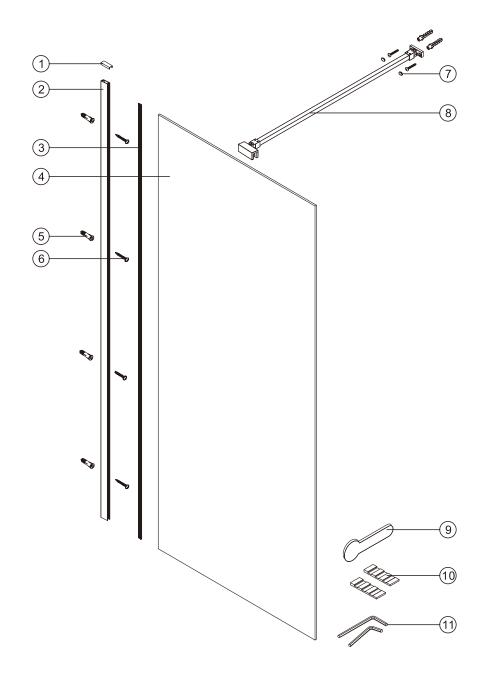


NO	Qty	Description	NO	Qty	Description
1	1	Cover Cap	7	2	Screw cap
2	1	Wall Channel	8	1	Bracing bar
3	1	Squeeze gasket	9	1	Squeeze gasket tool
4	1	Glass Screen	10	2	Glass Wedge
5	6	Wall Plug	11	2	Allen key
6	6	Screw ST4X40			

PARTS LIST

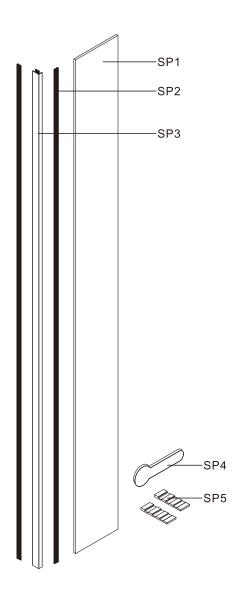

NO	Qty	Description
1	1	Glass Screen
2	2	Squeeze gasket
3	1	Corner profile
4	1	Squeeze gasket tool
5	2	Glass Wedge

PREPARATION

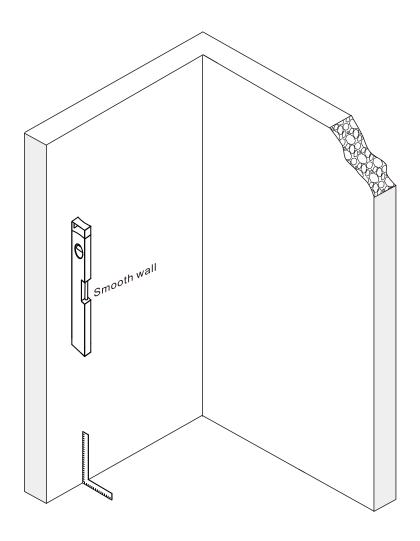

TOOLS AND MATERIALS REQUIRED





VIS SCREWS



TOURNEVIS SCREWDR



NIVEAU LEVEL



COUTEAU DE PRECISION PRECISION KNIFE



SILICONE SILICONE



FORETS: 1/8", 3/16" ET 1/4"

*FORET À MAÇONNERIE
DRILL BITS: 1/8", 3/16" ET 1/4"

*MASONRY DRILL BIT



RUBAN À MESURER MEASURING TAPE




ÉQUERRE SET SQUARE



CRAYON PENCIL







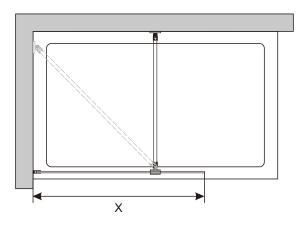



Size	X,mm	Size	X,mm
700	675~690	1100	1085~1100
800	775~790	1200	1185~1200
900	875~890	1400	1385~1400
1000	985~1000		




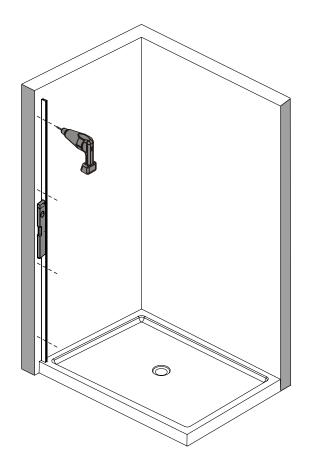


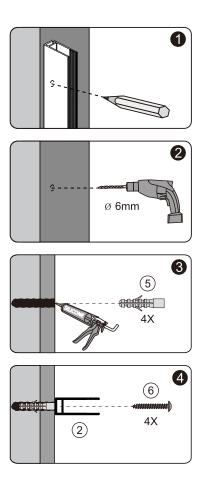

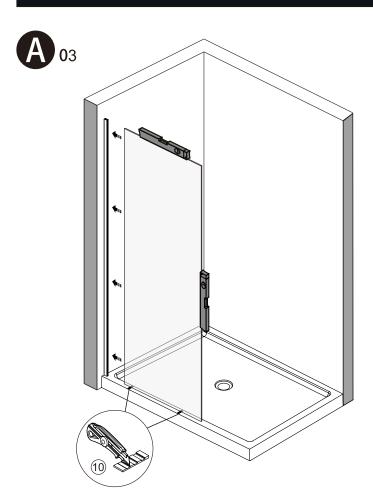


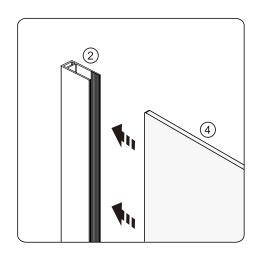


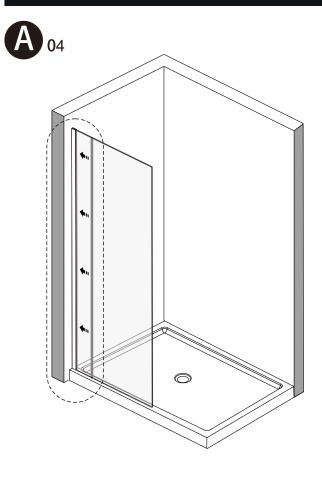


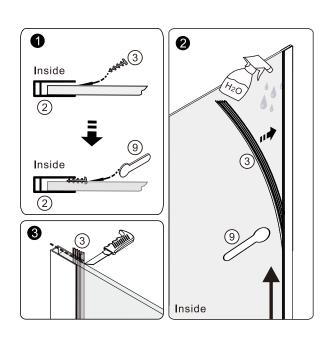





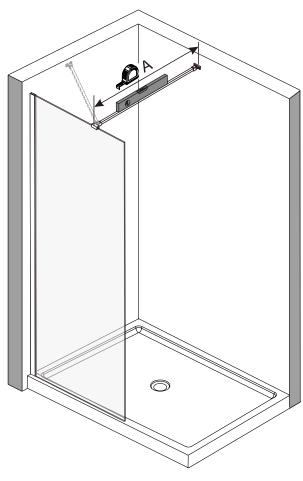


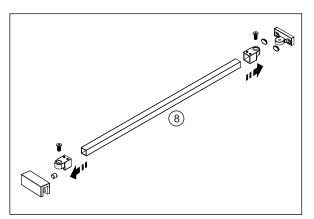





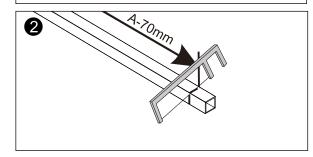


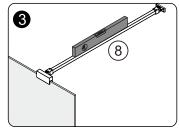











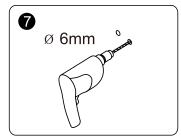


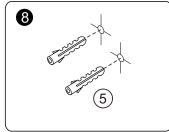


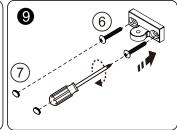

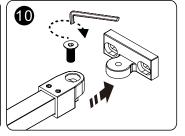


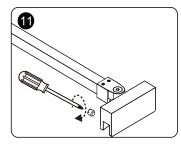


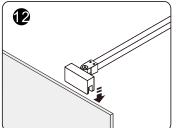


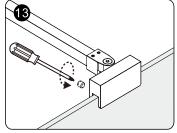




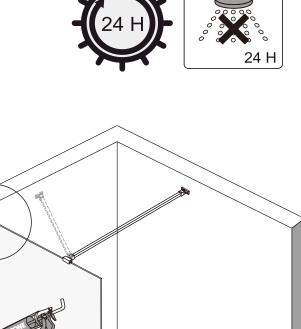

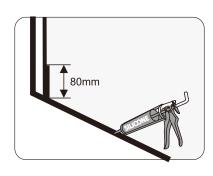

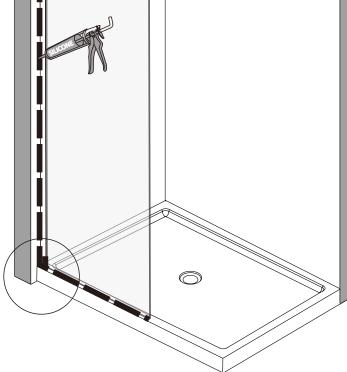





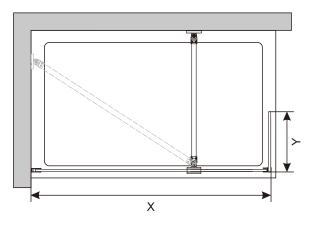



Size	X,mm
700	690~705
800	790~805
900	890~905
1000	1000~1015
1100	1100~1115
1200	1200~1215
1400	1400~1415

Size	Y,mm
300	300

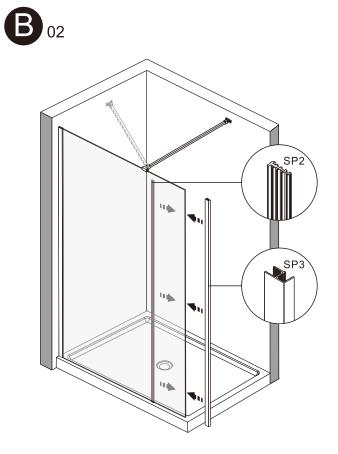


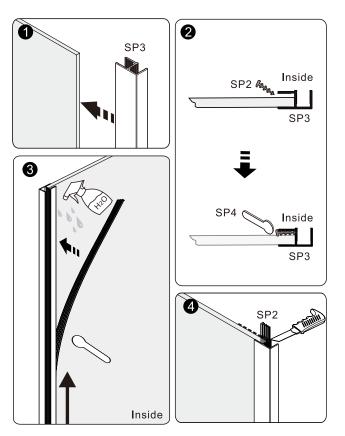

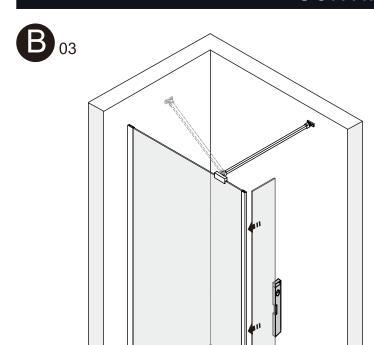


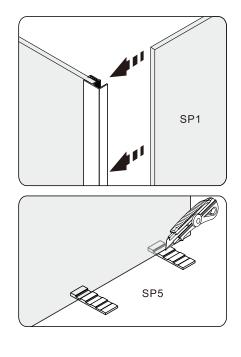



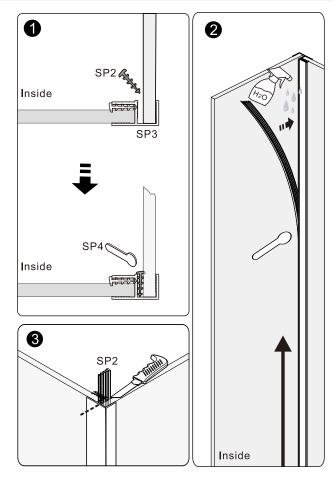



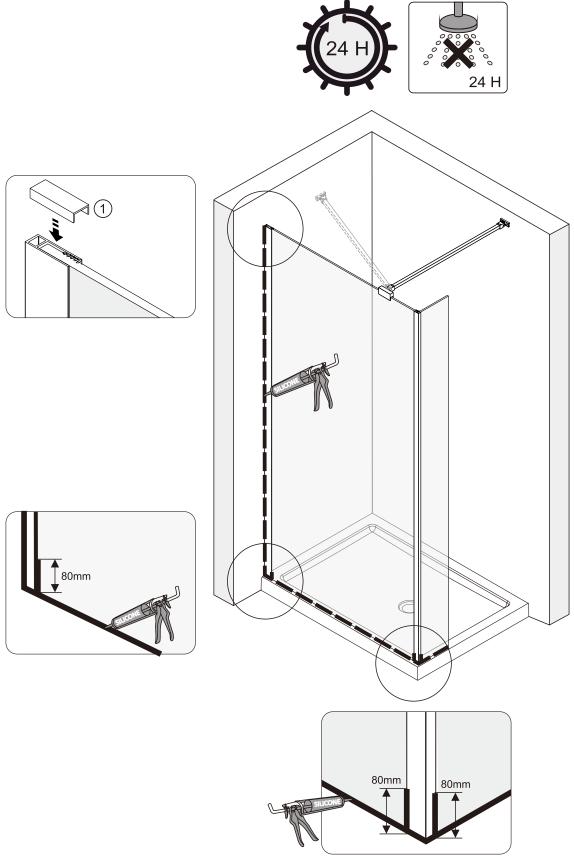



Recessed Installation

- 1. Cut flooring, allowing clearance on width and length of the tray to enable the tray to slot into position.
 - 2. Ensure the joists are adapted to give complete support to the shower tray.
 - 3. Install as per flat to floor installation.

Maintenance

As good as new finish can be maintained by following these simple instructions:

- 1. Dry out the tray fully after every use, to avoid build up of limescale and soap residue.
- 2. Clean the shower tray regularly using a damp cloth or sponge, dry with a soft dry cloth.
 - 3. Occasionally use a non-abrasive cleaner to remove stubborn stains.

Check List PLEASE NOTE: These checks should be carried out before installation. 1. Ensure the Quality Acceptance section has been read and understood. 2. Ensure the enclosure dimensions are compatible with the shower tray. 3. Check for any transit damage or product defects. 4. Perform a shower tray water drainage test before installation. Check that all Riser kit contents are present.* (See table below) Large Circular Small Circular Sticky Pad Sticky Pad Floor Clips Riser Kit Number 1 4 6 4 10 6 10 6 6 *Riser kits must be purchased separately.

Quality Acceptance

- 1. Fitting the product is acceptance of quality.
- 2. All guarantees are void unless all these instructions are followed. (Including maintenance)
- 3. In acceptance of quality, the check list must be completed.

