


AMBERGLO

USER MANUAL

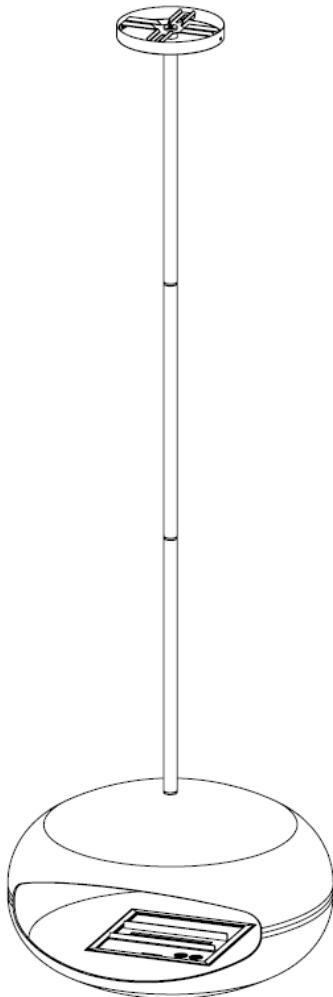

AGL079

AmberGlo Oval Hanging Matte Black Bio Ethanol Fire

Thank you for choosing our bio-ethanol hanging fire.
Please read this manual before using or installing these and keep it safe for
future reference.

CONTENTS

SAFETY WARNINGS	3
DIMENSIONS	6
PARTS	6
INTRODUCTION TO BIO-ETHANOL	7
BEFORE INSTALLATION	7
INSTALLATION	7
OPERATION	9
CLEANING AND CARE	10
TROUBLESHOOTING	10
TECHNICAL SPECIFICATION	11
SUPPORT	11

SAFETY WARNINGS

IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE. FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS MAY RESULT IN FIRE, INJURY, OR DAMAGE TO PROPERTY.

- This appliance is for decorative and domestic use only. It is not intended for commercial applications.
- Do not use this appliance for heating or boiling water or as a cooking appliance.
- This is not intended to be a household's primary source of heating.
- This appliance is not suitable for continuous operation.
- Do not use any fuel other than what is recommended by the manufacturer.
- Operate this appliance only in rooms that meet the ventilation and size requirements outlined in the manual.
- Read the operating instructions carefully before installation and use.
- Do not put anything on top of the appliance.
- Keep away from children and pets. Do not leave them unattended.
- Ensure the surface where the item is placed, positioned, or installed can bear the weight of the appliance.
- Install only in a location protected from draught or cross-ventilation.
- Ensure you avoid creating draughts in the room where the appliance is situated.
- Do not install the appliance near unsecured items, especially curtains, as these could easily catch fire.
- Do not cover or obstruct the air slots or rear ventilation.
- Do not put any flammable items on top of the appliance.
- Do not store any combustible or flammable goods close to the appliance.
- Do not store or place anything around the burner unless recommended by the manufacturer.
- Due to high surface temperatures, children, pets, clothing, and furniture must be kept away.
- Never store or transport the fuel in anything other than one that is suitable for use with the specified fuel in accordance with the Consumer Chemicals and Containers Regulations 2001 or is the original container for the specified fuel.
- Never use the appliance where flammable vapours or gas may be present.
- Do not apply force on the installed unit.
- Do not hang from, lean on or apply extra weight to the appliance.
- Always observe the local legislation when placing, installing and using the appliance.
- Only use the appliance in an adequately ventilated room.
- DO NOT ignite the appliance if it is still hot.
- Ensure nothing has been placed inside of the main body other than suitable decorative logs and pebbles that surround it before igniting the burner.
- Do not smoke while handling the fuel.
- Never refill the fuel during operation, as it poses a severe fire and injury risk.
- Do not overfill the burner beyond the maximum level specified in the manual.
- Never use any fuel other than bio-ethanol. Never use gasoline.
- Do not insert anything in the burner other than the fuel prescribed by this manual intended for use.
- Do not make any changes or amend the structure of the appliance.
- Do not modify the structure of the appliance or use parts not approved by the manufacturer.
- Ensure adequate ventilation. Use only in a room of at least 44 m³ and with airflow to avoid indoor air pollution.
- Risk of indoor air pollution: Only use in well-ventilated areas with adjacent doors open.
- Do not obstruct airflow to the burner by piling logs over it, but only around it.
- Never obstruct the burner with objects.
- People with breathing problems should consult a physician before using an ethanol fireplace.
- Accessible parts may become hot during use. Do not touch.
- Regularly check the secondary containment chamber for any fuel overspill and empty it before refuelling.
- Ensure no liquid fuel is present outside of the burner compartment, as this could lead to a

potential fire risk. Any overspill shall be removed before lighting the appliance.

- The overspill must be removed with an absorbent tissue and cleaned with water to prevent ignition outside the burner reservoir.
- Spilled alcohol may lead to matt stains on parquet flooring.
- Never leave the appliance unattended while in operation.
- Only use bioethanol fuel as specified by the manufacturer. Never use gasoline or other fuels.
- Using a fuel source other than specified in the manual may damage the item and void the warranty.
- Fuel shall be stored in a fire-safe area at least 1 metre away from the fireplace and at room temperature for ease of facilitating ignition.
- In case of deterioration or accident due to negligence, damages caused by failing to maintain and service the appliance or any

modification of the item, will result in the warranty being void.

- The warranty does not cover the unit if subject to abnormal use or other than intended use.
- Any flammable or combustible material should be kept at least 1 metre (40 inches) away from the fireplace.
- Maintain a minimum clearance of 2 metres (80 inches) from any window or curtain.
- Do not leave unburned fuel in the burner for prolonged periods; allow it to burn completely before refuelling.
- Never extinguish the flame with water; if possible, let the fuel burn out completely or use the supplied flame extinguisher. This prevents alcohol from remaining in the reservoir and deflagration when reigniting.
- Only extinguish the burner through the use of the flame controller.
- Do not use your hand or any object other than the supplied flame controller to close the burner or adjust airflow.

THIS APPLIANCE HAS NOT BEEN TESTED WITH DOORS OR AN UNVENTED GAS LOG SET. TO REDUCE THE RISK OF FIRE OR INJURY, DO NOT INSTALL DOORS OR AN UNVENTED GAS LOG SET INTO THIS APPLIANCE.

This item is compliant with EN 16647.




Do not fill fuel into the open flame or hot burner.



Do not position near combustible items.



Keep suitable extinguishing agent ready.

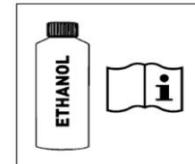

Adhere to instructions about fuel.



Use fire blanket in case of fire.



No smoking near appliance.



Do not put objects on the fire.



Do not touch the flames.



WARNING: FLAMMABLE MATERIAL



Protect fire against draft.



Never fan the fire.



Health Hazard.

UNPACKING THE APPLIANCE

- Unpack the appliance and accessories.
- Check all parts are complete and no damages have incurred within transit.
- Keep children and pets away from packaging.

CARBON DIOXIDE WARNING

IMPORTANT: Failure to abide by the room size and ventilation requirements can cause the fire to consume all of the oxygen in the room and replace this with carbon dioxide.

Carbon dioxide can kill. All heating appliances fuelled by bio-ethanol can cause carbon dioxide poisoning, with the proper airflow, this is extremely rare. Poor ventilation is generally the cause of carbon dioxide poisoning.

Symptoms of carbon dioxide poisoning include:

- Headache
- Dizziness or tiredness
- Pins and needles or tingling.
- Sweating.
- Increased heart rate and BP
- Shortness of breath

The symptoms may come and go. They may worsen when you spend time in an affected room or building and get better when you leave or go outside.

You can reduce the risk of carbon dioxide poisoning by:

- Ensuring that the ventilation provisions are adequate for the room and the appliance – The requirements within this manual must be followed.
- Ensuring the appliance is operated in accordance with the manual.
- Where ventilation is necessary, ensure it is operational whilst the appliance is in operation.
- Ensuring that the maintenance advice within this manual is followed to keep the appliance operating efficiently and safely.
- Ensuring that the appliance is not modified.
- Install a carbon dioxide alarm in every room where an appliance is present and ensure it is tested regularly.


The provision of an alarm must not be considered a substitute for installing the appliance correctly or ensuring regular maintenance of the appliance.

If you think you might have carbon dioxide poisoning:

- Stop using appliances you think might be making carbon dioxide if you can.
- Open any windows and doors to let fresh air in.
- Go outside.
- Get medical advice as soon as possible – do not return to the affected building until you have advice.

DIMENSIONS

NOTE: All images are for illustrational purposes only and may be subject to change due to continual improvement of the item. All measurements are in mm.

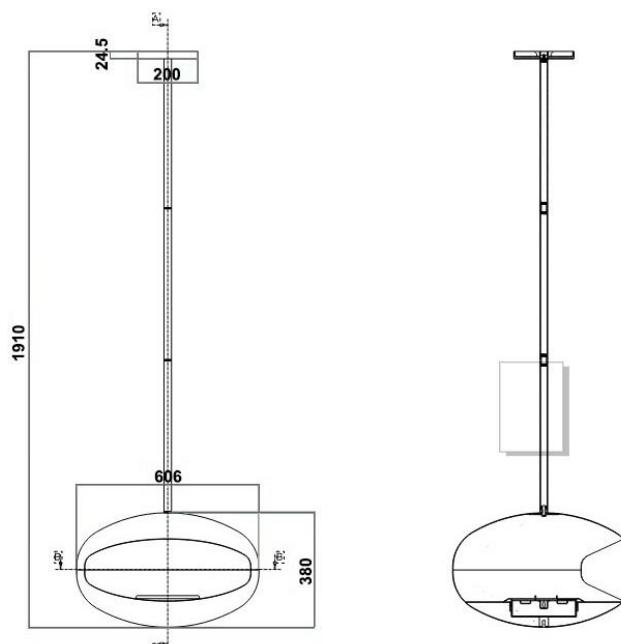

PARTS

DESCRIPTION	IMAGE	QTY	DESCRIPTION	IMAGE	QTY
Main body		1	Closure plate		1
Tray bracket		1	Ceiling bracket		1
Mounting plate		1	Extension bar		3
Burner		1	M10x25mm bolt		1
Burner handle		1	M5x60mm screws		4
Ceiling base plate		1	M4x10mm screws		2
M25 grub screw		1	M25 double-ended grub screws		2
M10 washer		1	Wall plugs		4
Flame extinguisher		1	Flame controller		1

INTRODUCTION TO BIOETHANOL

Bioethanol is a renewable, eco-friendly fuel derived from plant-based sources such as sugarcane, corn, and other biomass. It is clean-burning and produces no harmful emissions, making it an excellent alternative to traditional fuels.

When burned, bioethanol produces heat, water vapour, and carbon dioxide, similar to human respiration. As a result, bioethanol fireplaces do not require a chimney, flue, or gas connection, making them easy to install and use in various indoor settings.

Bioethanol fireplaces are designed for decorative and domestic use and provide a real flame effect without the need for wood, gas, or electricity. However, as with any open-flame appliance, proper usage and safety precautions must be followed to ensure safe operation.

BENEFITS OF USING A BIO-ETHANOL BURNER

- **Bioethanol is kinder to the environment than traditional fuels.** It is a sustainable fuel that emits no smoke and the approximate CO² as two lit candles.
- **Easy Installation** - No chimney, flue, or gas connections are required.
- **Real Flame Effect** - Provides the ambience of a traditional fireplace without ash, soot, or residue.
- **Flexible Placement** - Can be used in various locations within a home, provided adequate ventilation is ensured.
- **Minimal Maintenance** - No need for regular cleaning of soot or ash.

BEFORE INSTALLATION

- Ensure this appliance is installed away from combustible material or draughts.
- Any flammable material should be kept at least 1 metre (40 inches) away from the fireplace.
- A safety distance of at least 2 metres (80 inches) should be kept from any window or curtain.
- Ensure reasonable ventilation in the room this will be placed as burned ethanol emits water vapour and carbon dioxide.
- Ensure this is not installed in a bathroom, small room or any room where sleeping accommodation is provided.
- Do not install this in a room where less than 44m³ (1550ft³) of air space is provided.



INSTALLATION

NOTE: Before installation, ensure all parts are present and pristine. Read all the safety warnings and the before-installation section.

STEP 1









Decide where you would like to position the appliance. Ensure it is away from all combustible material or draughts and that the ceiling can withstand the weight of the unit.

Mark holes in the ceiling using the ceiling bracket as guidance, drill holes in these marks, insert the wall plugs and secure the bracket using the four M5*60mm screws.

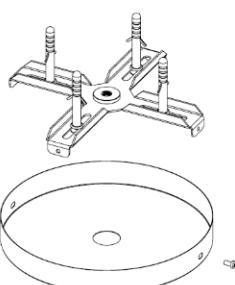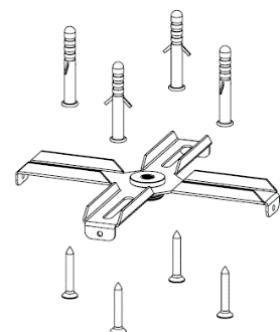

STEP 2


Once the bracket is secured to the ceiling, secure the ceiling base plate to the ceiling bracket using the two M4*10mm screws.
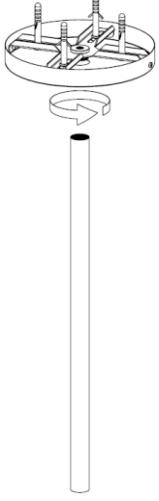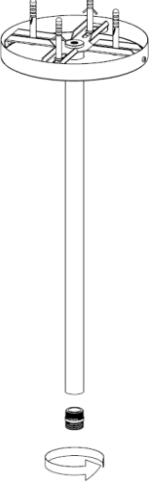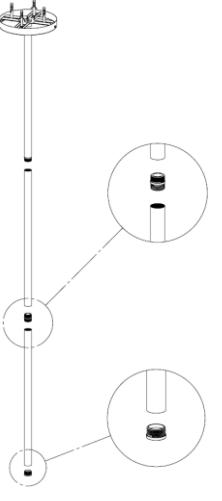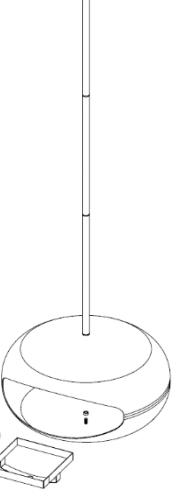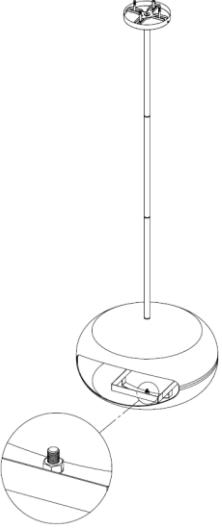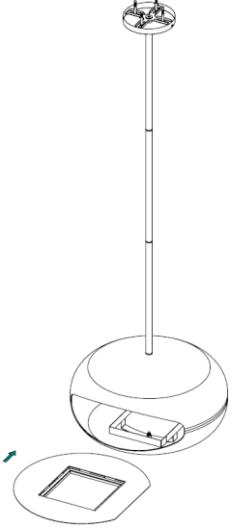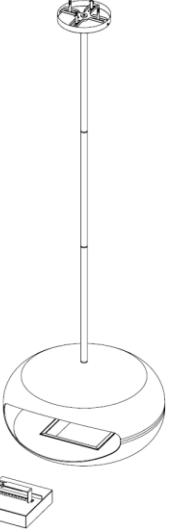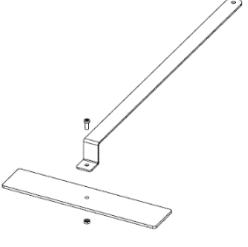
<p>STEP 3 Secure the extension bar to the ceiling bracket counter-clockwise. Ensure this is properly secure.</p> 	<p>STEP 4 Secure the M25 double-ended grub screw to the bottom of the first extension bar by screwing this counter-clockwise.</p> 	<p>STEP 5 Repeat steps 3 and 4 for the second and third extension bars, ensuring these are secure. Secure an M25 grub screw to the bottom of the third extension bar.</p> 	<p>STEP 6 Seek assistance to lift the main body up as you align the screw hole of the extension bar to the top and secure this from the inside using the closure plate and one M10*25mm bolt.</p> 	<p>STEP 7 Undo the M10 washer from the inside bottom of the main body and insert the tray bracket atop the bolt.</p> 
<p>STEP 8 Secure the tray bracket to the main body using the M10 washer. When fitted, ensure the tray mount is level and centred.</p> 	<p>STEP 9 Place the mounting plate above the tray bracket. Ensure this is level and centred.</p> 	<p>STEP 10 Place the burner tray inside the mounting plate atop the tray bracket. Ensure this is level.</p> 	<p>STEP 11 Place the burner inside of the burner tray</p> 	<p>STEP 12 Undo the screw and washer from the head of the flame extinguisher and use this to secure the handle to the head.</p> 

OPERATION

REFILLING THE BURNER

IMPORTANT: The fuel is not provided; you will need to purchase fuel. Only purchase bio ethanol fuel, which is explicitly intended for bioethanol fires.

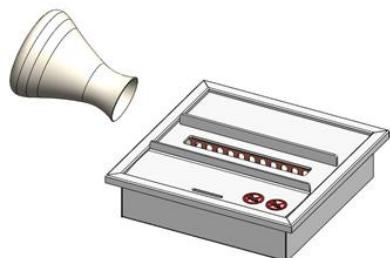


Ensure the burner is off and cooled completely after extinguishing. Open the lid to its widest opening. Fill the burner with bio-ethanol until it reaches the bottom of the “max” line. Do not overfill or spill.

Any spilt ethanol must be immediately removed with absorbent tissue and cleaned with water to prevent ignition outside the burner reservoir.

NOTE: Never refill the burner during use.

IGNITING THE BURNER


NOTE: Ensure there is no fuel or overspill outside of the burner prior to ignition. Ensure there are no obstructions to the burner airflow, and no combustible or flammable material has been placed inside the main body.

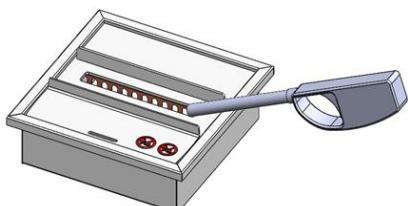

Use a long match or candle lighter to ignite the burner. Matches can be used, but you must ensure dead matches are not put into the burner.

Repeat the ignition process if the burner does not ignite until the flame burns steadily.

The flame will slowly light. Please allow 15 minutes for it to reach the normal temperature and flame height.

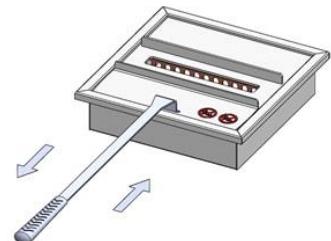


ADJUSTING THE FIRE

Use the flame controller to adjust the flame height and airflow. The amount of airflow will affect the speed at which the fuel is consumed. The bigger the airflow, the faster the consumption.

NOTE: Do not use your hand or any other combustible object to adjust the burner lid.

EXTINGUISHING THE FIRE

Use the flame extinguisher to cover the burner hole until the fire dies out. Alternatively, in an emergency, use the flame controller to close the lid fully in a swift motion. If the fire has not yet been extinguished, repeat the previous step.

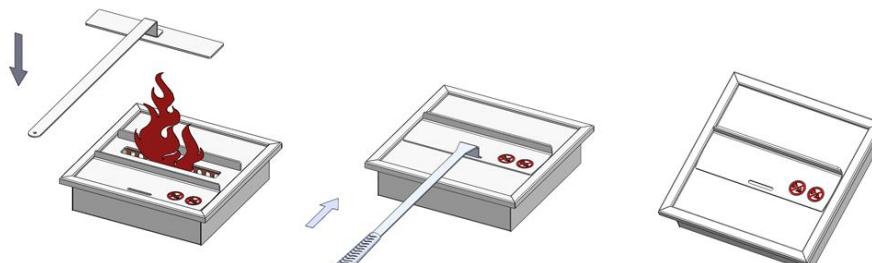

NOTE: Never extinguish the flame with water; let the fuel burn out completely if possible. This prevents alcohol from remaining in the reservoir and deflagration when reigniting.

IMPORTANT: In the event of a fire, we recommend keeping a Class B fire extinguisher or a fire blanket close by for easy access. Always contact your local fire department in the event of a fire.

CLEANING AND CARE

The fire and all of its parts must be cleaned regularly and checked for damage or wear and tear. All cleaning and maintenance should be carried out when the burner is cooled completely.

Once the fuel has burnt out, the fire and burner must be cleaned frequently with mildly warm, soapy water and a soft sponge and then dried with a soft cloth. Any marks can be removed with a soft cloth, a mixture of lukewarm water and a small amount of cleaning liquid (ph-neutral).

Regularly inspect the fire, especially the burner parts, for warping or damage. If one is damaged, stop using it and replace the part before use. Do not use abrasive powders or cleaning materials.

Regularly check the extension bars are secure. If the grub screws are threaded or damaged in any way, please stop using and replace these parts securely before using again.

REMOVING THE BURNER

Once the burner is not in use and is completely cooled, you may lift it up and outward with the supplied burner handle when you need to refill or clean it.



To use the handle:

1. Contract the handle by pushing each side inward.
2. Insert the burner handle into the burner crevice.
3. Retract the handle by pulling each side outward.
4. Lift this and take it out.

To reinsert the burner, follow steps 1-3 and insert the burner on the tray.

TROUBLESHOOTING

ISSUE	POSSIBLE CAUSE	SOLUTION
The flame does not ignite.	Fuel level too low or incorrect fuel used.	Refill with specified bioethanol fuel.
The flame is weak or goes out quickly.	Inadequate ventilation or fuel contamination.	Ensure adequate airflow and use clean bioethanol.
The burner emits a strong odour.	Spilled fuel or improper fuel type.	Clean spills and use only recommended fuel.
Soot or smoke is present.	Obstructed burner or poor-quality fuel.	Remove obstructions and use 95% bioethanol.
The appliance is excessively hot.	Poor ventilation or proximity to other heat sources.	Improve ventilation and ensure proper clearance.
The flame does not extinguish properly.	Faulty flame extinguisher.	Use only the supplied flame extinguisher and replace it if necessary.

TECHNICAL SPECIFICATION

MODEL	AGL079
DIMENSIONS (L x D x H)	606x568x380~1910mm(±5mm)
NET WEIGHT	18.9kg
FUEL TYPE	95% ETHANOL
MAXIMUM BURNER VOLUME	1.4L
FUEL CONSUMPTION	0.19kg/h
HEAT OUTPUT	1.51kW
SUGGESTED MINIMUM ROOM VOLUME	39m ³ (1377ft ³)
SECURITY DISTANCE	1m

SUPPORT

www.furniture123.co.uk/content/customer-services

Office hours: 9 AM - 5 PM, Monday to Friday

Buy It Direct
Unit 2A, Trident Business Park,
Neptune Way, Leeds Road,
Huddersfield, HD2 1UA.

V20251126LE